 


DIGITAL PIANO USER MANUAL

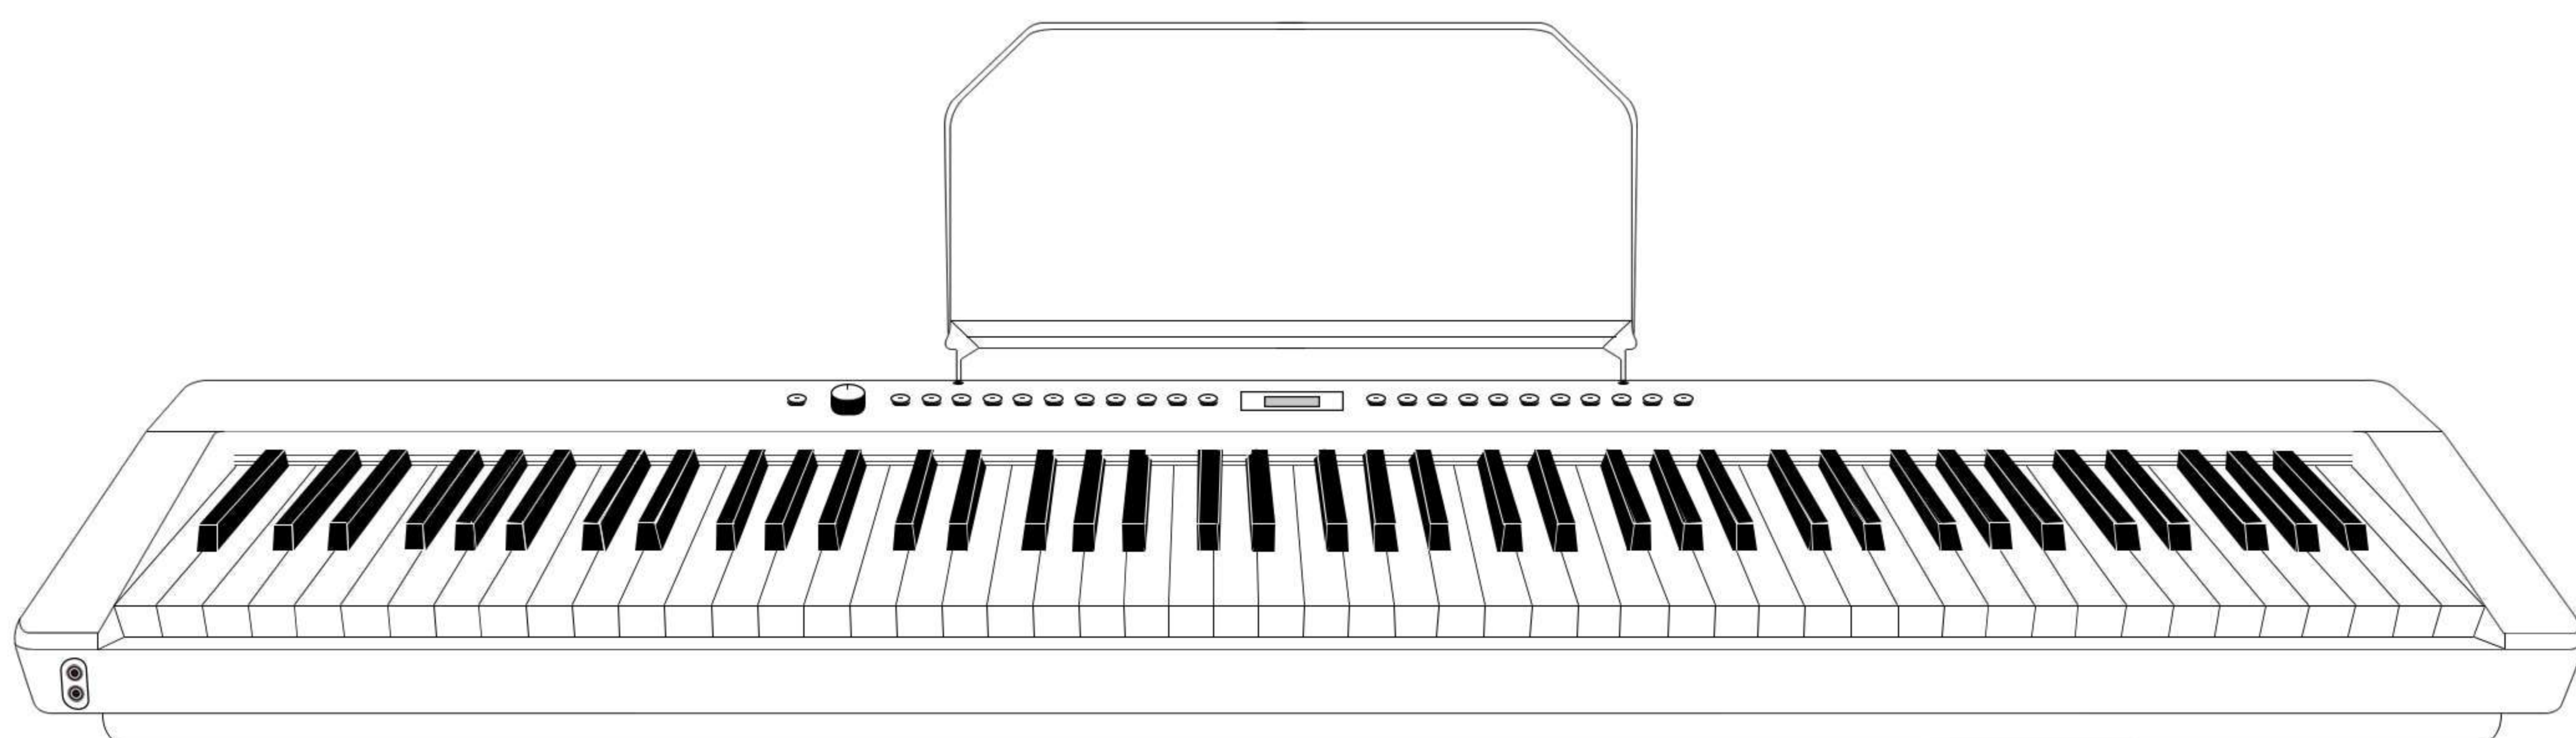

简体中文

ENGLISH

This product is subject to change without prior notice



Function introduction


Thank you for choosing our digital piano. This product is elegant and exquisite, which is the perfect presentation of contemporary new electronic technology and acoustics.

- You must read this instruction manual in detail before using this instrument.




Screen adopts French Dream digital sound source.

Its core adopts DSP new digital sound source and digital audio analog sampling, bringing a realistic auditory experience to your performance.

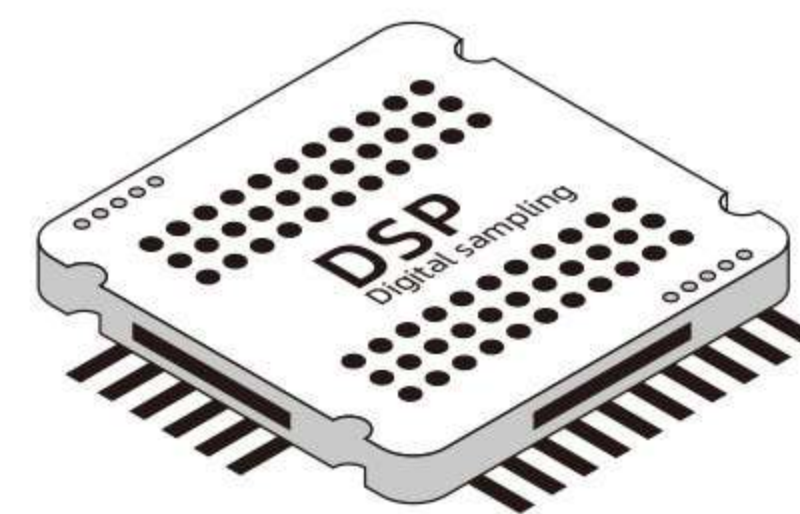

Single * 88 progressive step-by-step heavy hammer keys

88 key progressive lever step-by-step heavy hammer keyboard gives you a real touch like playing on a grand piano.

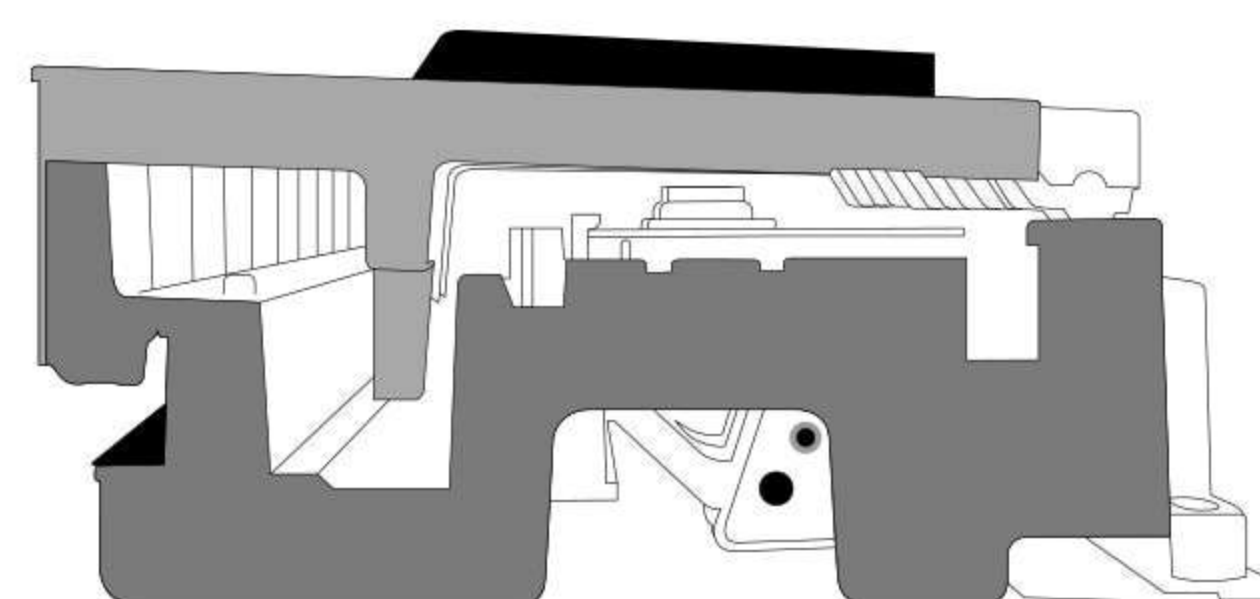

- keyboard: 88 standard heavy hammer keyboard
- Color: PVC Black / Red
- French dream dream sound source
- Timbre: 200 Timbres / 200 Rhythms / 100 Demonstration songs
- Power switch / Main volume control
- Weak tone / Continuous tone / Extended tone (Three pedals)
- Metronome / Audio output / Recording function / Chord / intensity
Dual keyboard / LCD Display
- Dual audio headphone output
- USB interface link: USB flash drive, MP3 to play songs
- Product specification: 132cm*23cm*10cm (Height: 74cm of piano leg)
- Weight: 12kg (Net weight)
- Power supply: 15V2A
- Power supply: 6 universal batteries No. 5 (Self-Configured)

NOTE!

- This product is an electronic musical instrument. It is normal for the speaker or earphone to have a little current sound after power on. During use, please stay away from "radio, TV, antenna receiver, router, refrigerator, TV, electrical appliances with motor and other RF electrical interference source.



Contents

Function introduction-----	1
Contents-----	2
Function keys-----	3
On/Off -----	3
Volume -----	3
Insert dual keyboards -----	4
Illustration of sockets-----	18
Power cord connection -----	18
Dual headphone audio output -----	18
Audio input connector-----	18
USB Interface Connection -----	18
Demo song list-----	9
Timbre list -----	11
Rhythm list -----	13
Fingered Chord List-----	15
Single Finger Chord List-----	16
Product Maintenance-----	17
Safety precautions -----	19
Warranty card -----	22

简体中文


ENGLISH



Instructions for using function panel keys1


⊖ On/Off

- ★ Short press the **【on/off】** key to start the power supply.
- ★ Long press the **【on/off】** key to turn off the digital piano.
- ★ In standby mode, it will automatically shut down in 30 minutes.

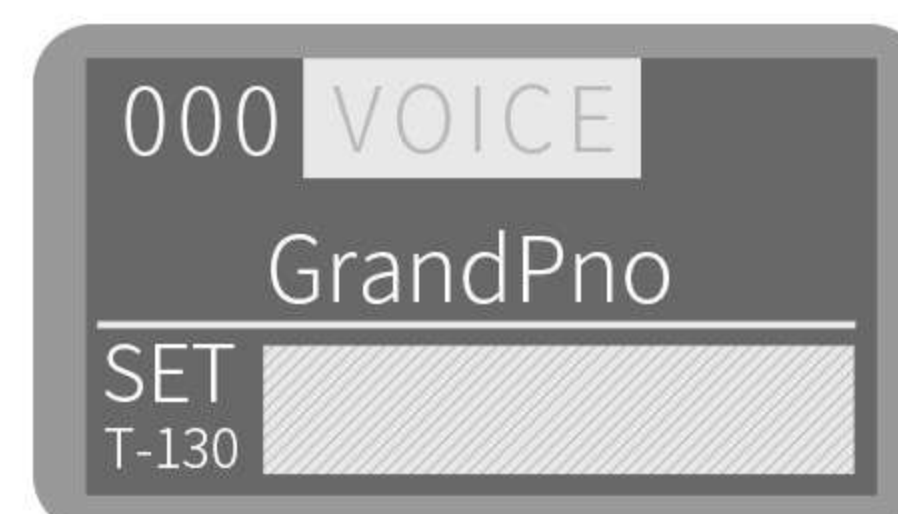


⊖ Volume

- ★ Main volume control: use the **【volume】** button to control the volume
- ★ Rotate the **【volume】** knob to the right to increase the volume,
- ★ Rotate the **【volume】** knob to the left to decrease the volume. - volume +
- ★ Before starting the power supply, turn the **【volume】** knob to the left to minimize the volume.

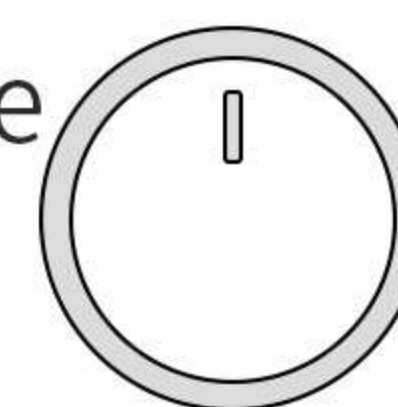


⊖ Previous/Play/Next

- ★ Short press the **【previous】** key to switch to the previous song, and long press to reduce the MP3 volume.
- ★ Short press the **【next】** key to switch to the next song, and long press to increase the MP3 volume.
- ★ Short press the **【play】** key to play the songs in MP3.
- ★ Long press the **【play】** key to stop playing the songs in MP3.

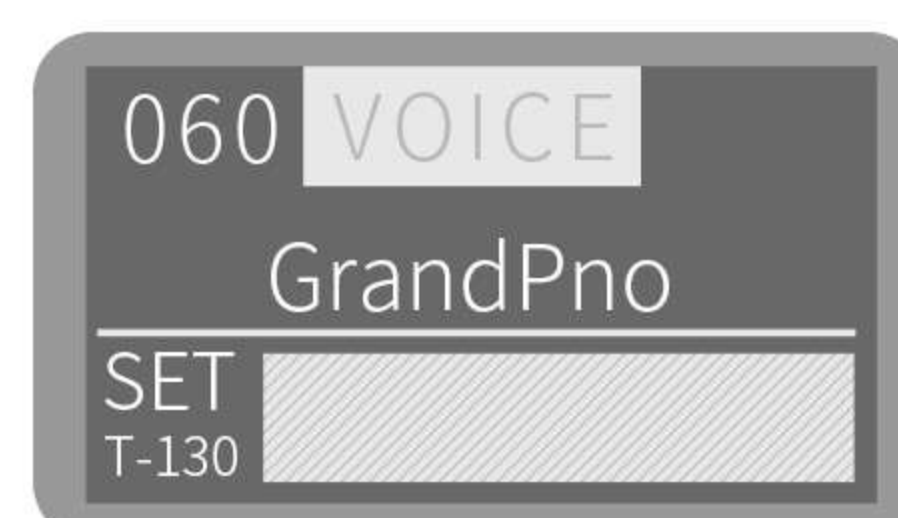

⊖ Start / Chord

- ★ Press the **【Start/Chord】** button ,start playing rhythm.
- ★ Press the **【Start/Chord】** button ,stop playing rhythm.
- ★ Note: in playback, metronome, demonstration song and other modes, it will not automatically exit the rhythm playbackmode.

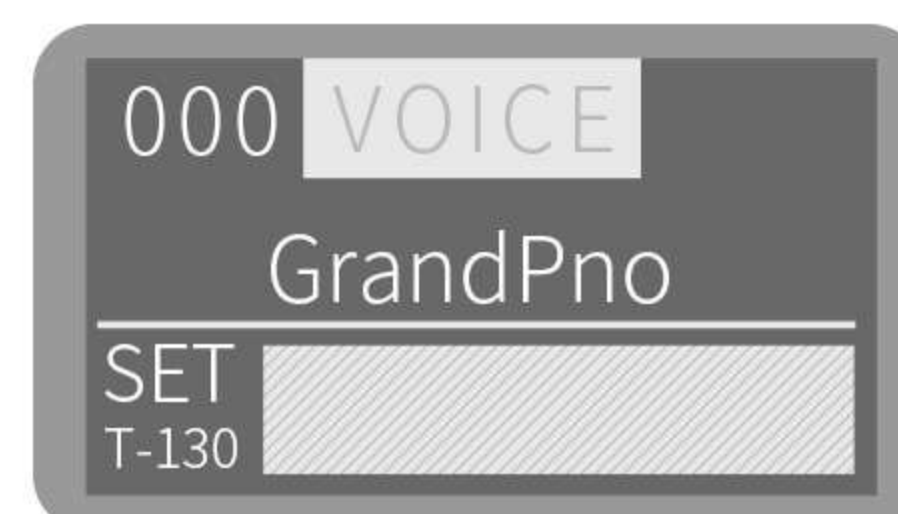

简体中文


ENGLISH



Instructions for using function panel keys2

⊖ Synchronous start and synchronous stop


- ★ Short press the 【synchronous start / stop】 key to turn on the synchronous start function, and the light will flash.
- ★ Short press the 【synchronization start / stop】 key to off the synchronization function.
- ★ When playing a chord, briefly press the 【synchronization start / stop】 key for the first time - press the piano key in the A1-F4# range of the chord area to enter the synchronization mode.

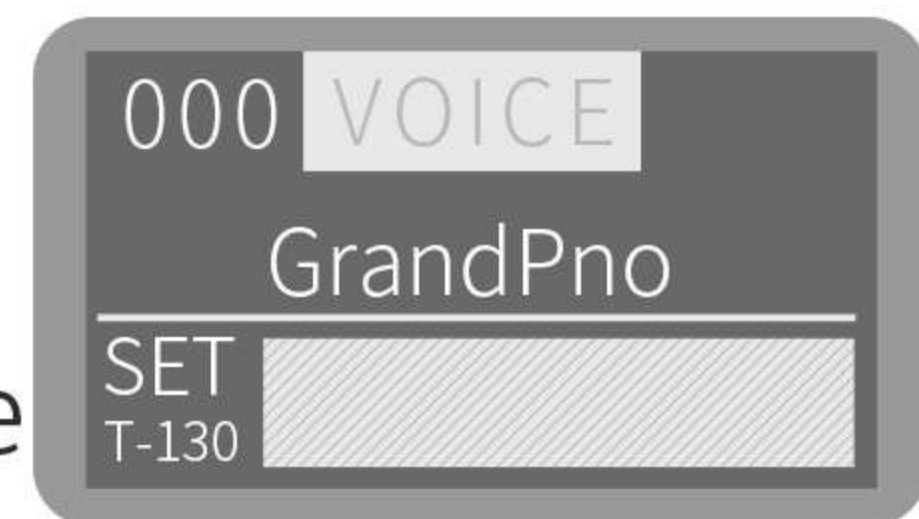

For the chord synchronization part, please refer to the instructions of one-finger accompaniment or multi-finger accompaniment.


⊖ Insert / Dual keyboard

- ★ Press the 【insert/dual keyboard】 key without starting the rhythm.
- ★ Short press the 【insert / dual keyboard】 key to start the dual keyboard function.
- ★ Short press the 【Setting/Dual Tone】 key to select the keyboard separation point function.
- ★ Use the 【+】 key or the 【-】 key or directly press the piano key to select the separation point.
- ★ Shortpress the 【Settings/Dual Tone】 key to enter the setting state and select the left keyboard volume function to adjust the left keyboard volume.
- ★ The first time you press the 【insert/dual keyboard】 key to start the keyboard separation (i.e. dual keyboard) function,
- ★ The second short press of the 【insert/dual keyboard】 key to turn off the keyboard separation (i.e. dual keyboard) function.

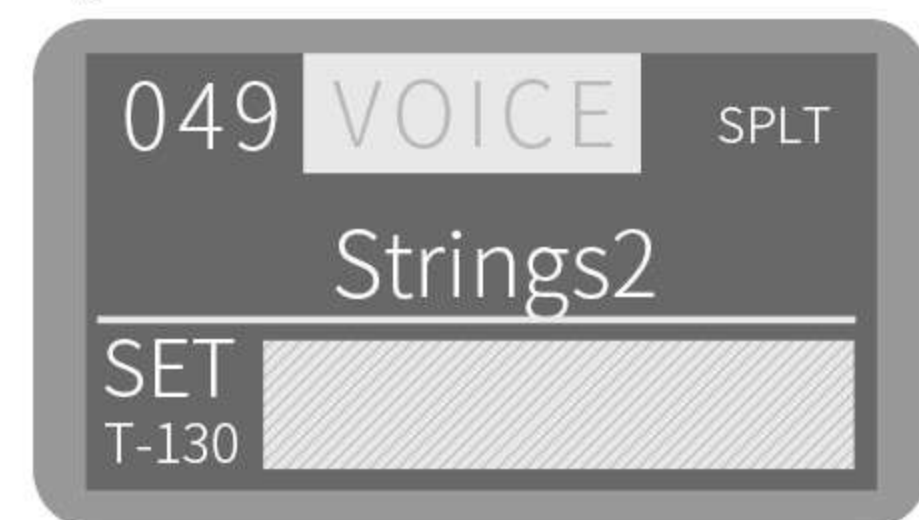

简体中文

ENGLISH


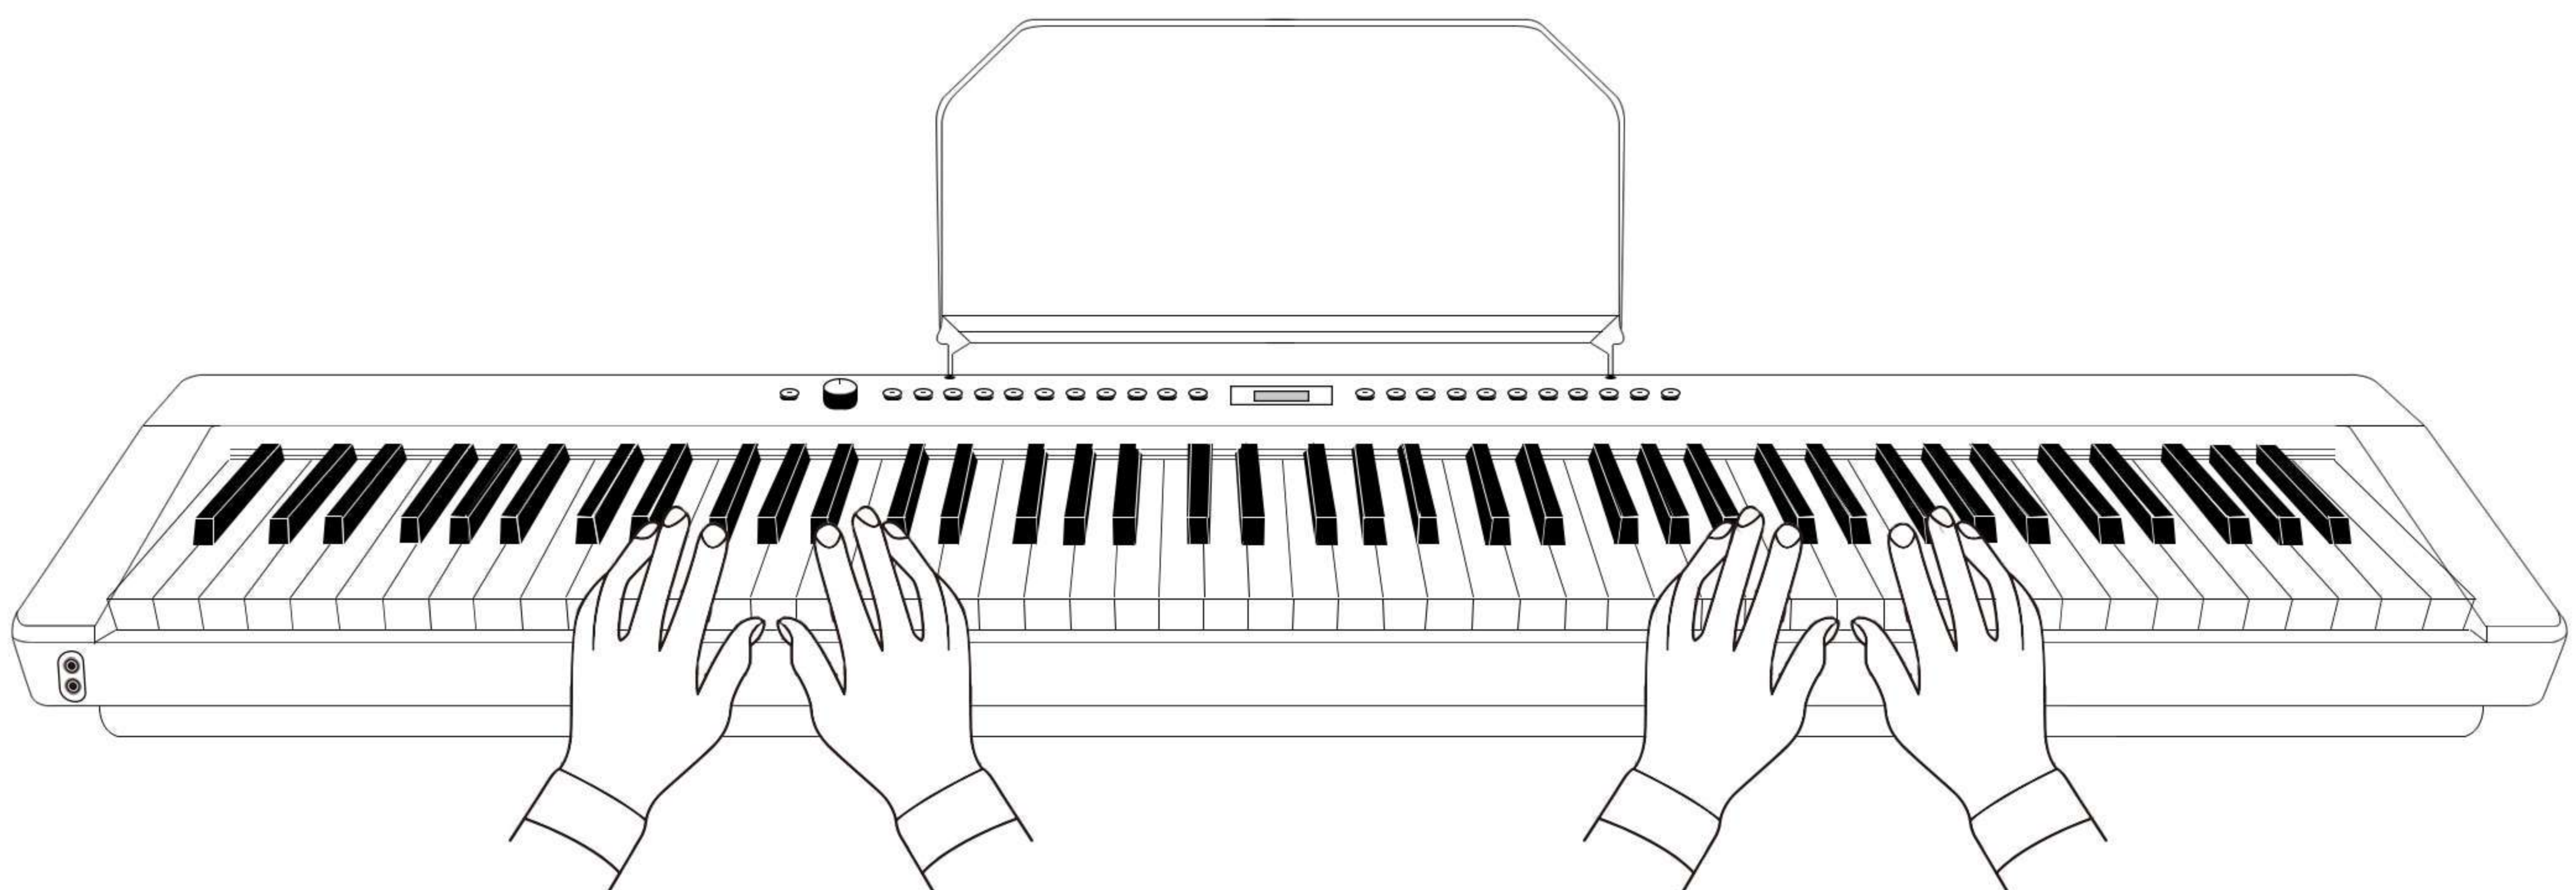




Instructions for using function panel keys3



⊖ Prelude and End

- ★ Short press the **【prelude and endplay】** key, and the light flashes.
- ★ Short press the **【start / chord】** key to indicate that the prelude has been started.
- ★ Long press the **【prelude and endplay】** key to end the endplay.

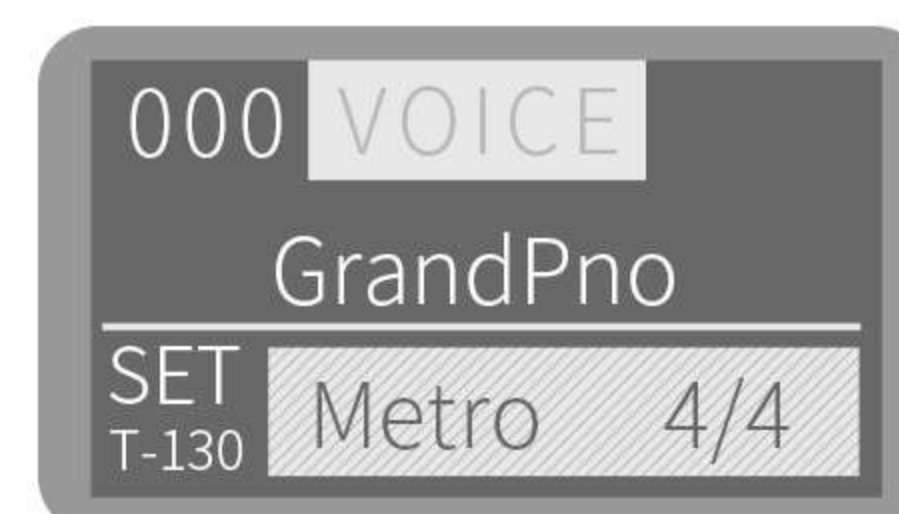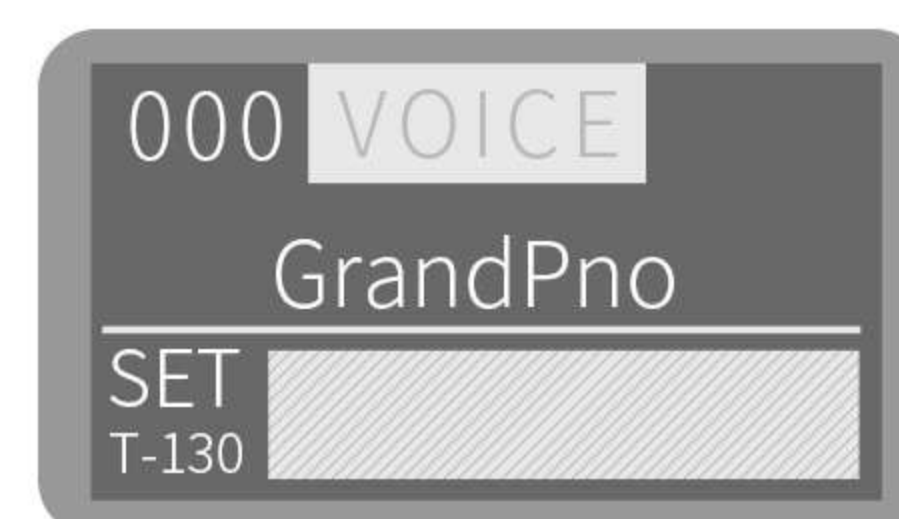

⊖ Metronome / Beat

- ★ This digital piano has a built-in metronome, which can be used as a reference for practice or performance.
- ★ Press the **【metronome / beat】** key for the first time to open the metronome, "Da, Da, Da" sound appears, and then long press the **【metronome / beat】** key. When the screen is 4 / 4, press the **【+】** key or **【-】** key to increase or slow down the beat speed. The range: 1/4 , 2/4 , 3/4 , 4/4 , 5/4 , 6/4 , 3/8 , 6/8 , 12/8
- ★ Press the **【metronome / beat】** key for the second time to close the metronome.

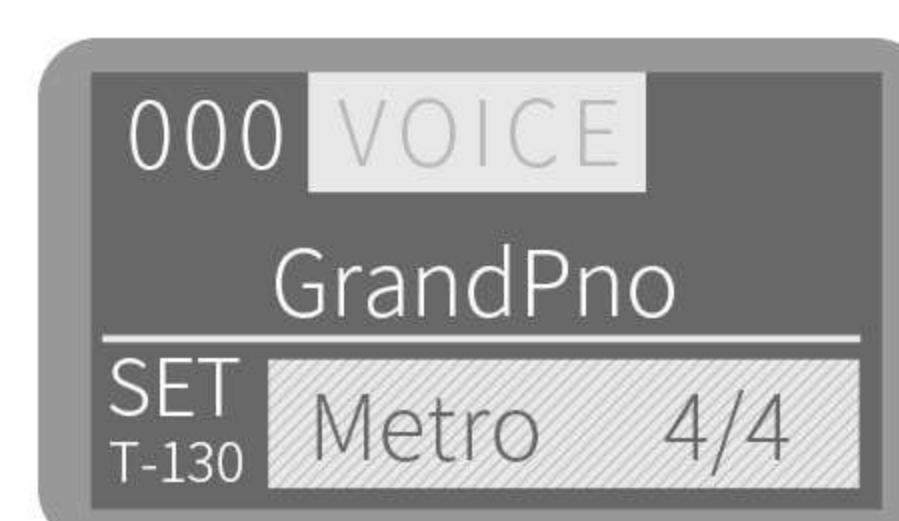
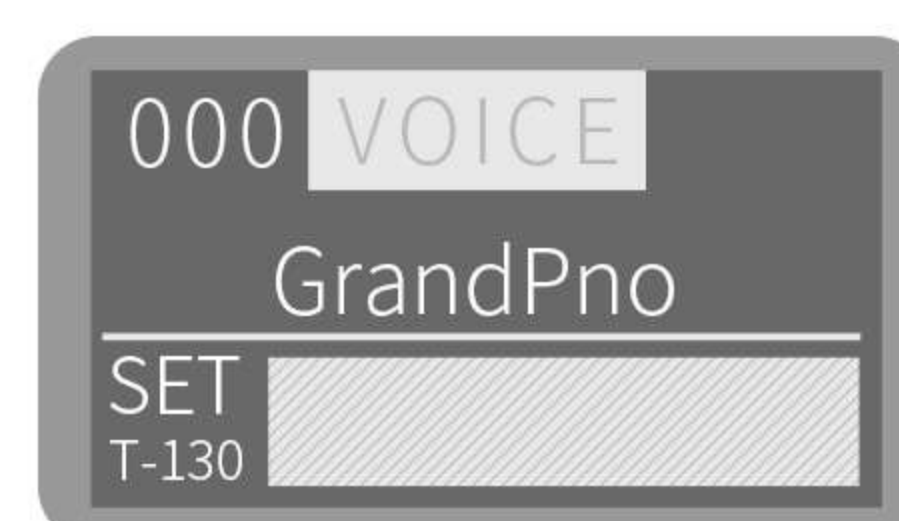


简体中文

ENGLISH

⊖ Speed / Shift

- ★ Short press the **【speed / transfer】** key -- press the **【+】** key or **【-】** key to select The required rhythm. (Range: 20-280, Default Speed: 130)
- ★ Short press the **【start / stop / chord】** key to start the rhythm
- ★ Long press the **【start / stop / chord】** key to start the chord function.
- ★ Long press the **【speed / transfer】** key -- press the **【+】** key or **【-】** key to select Transfer required. (range: - 12-12, default: 00)
- ★ **Be careful:** After pressing within the range of key A1-F4#, the corresponding chord accompaniment can be played.

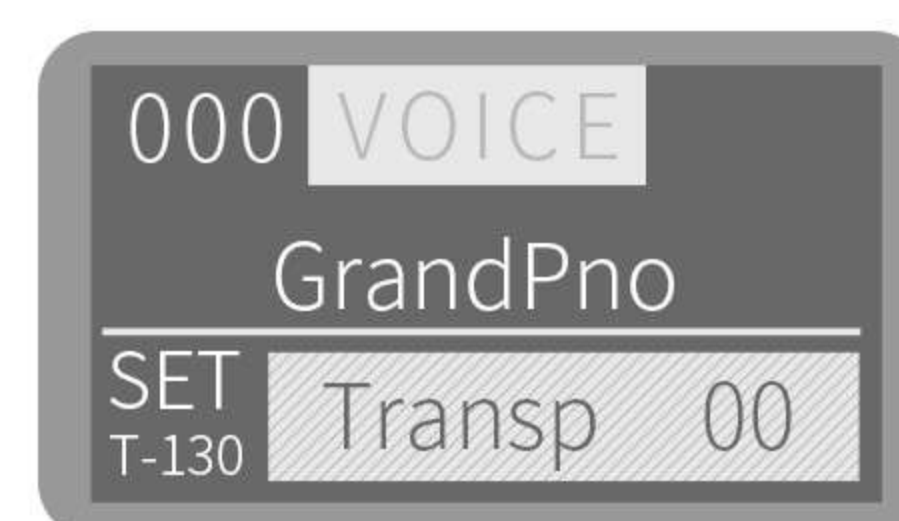
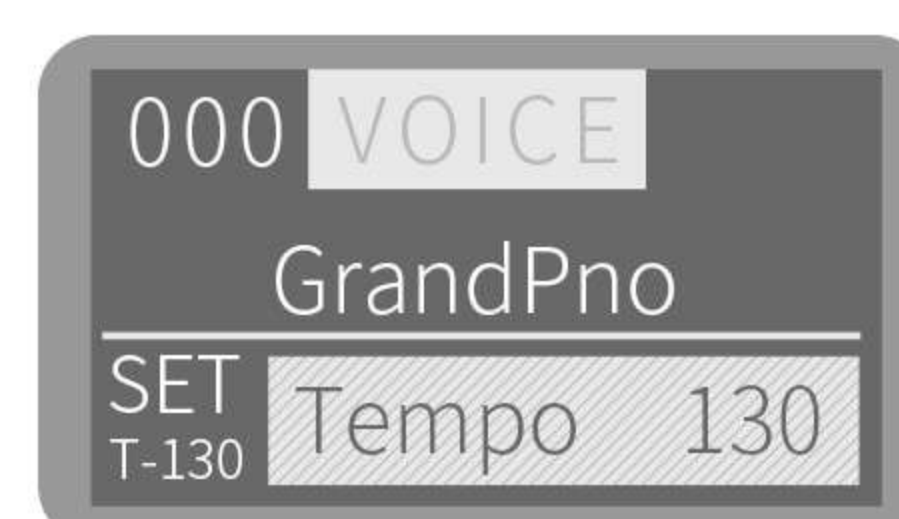




Instructions for using function panel keys4


⊖ Store / Tuning

- ★ Long press the 【store / transfer】 key to save the current state of the piano, including all parameters of timbre and rhythm type. When it is used again, short press the 【store / call】 key to call to quickly restore the piano to this state.
- ★ Short press the 【store / tuning】 key to transfer the function.

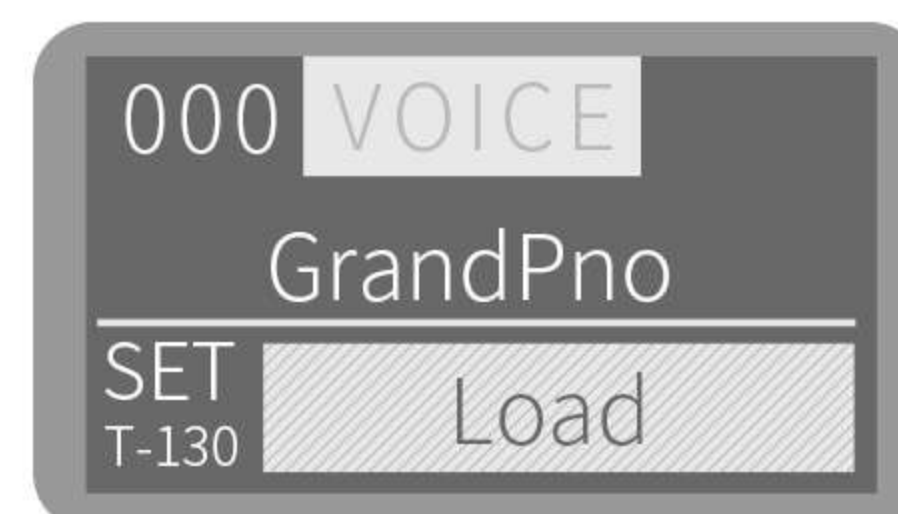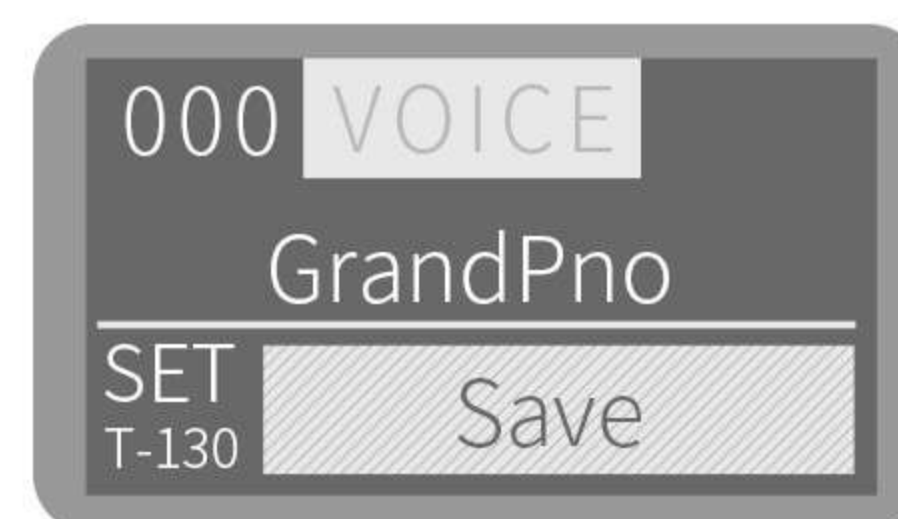


⊖ Set / Dual tone

- ★ Long press the 【setting/dual tone】 key to select dual tone Reverberation, chorus, double keyboard dynamics, tuning and other functions, Use the 【+】 key or 【-】 key to adjust. Reverberation (1-8), Chorus (1-8).

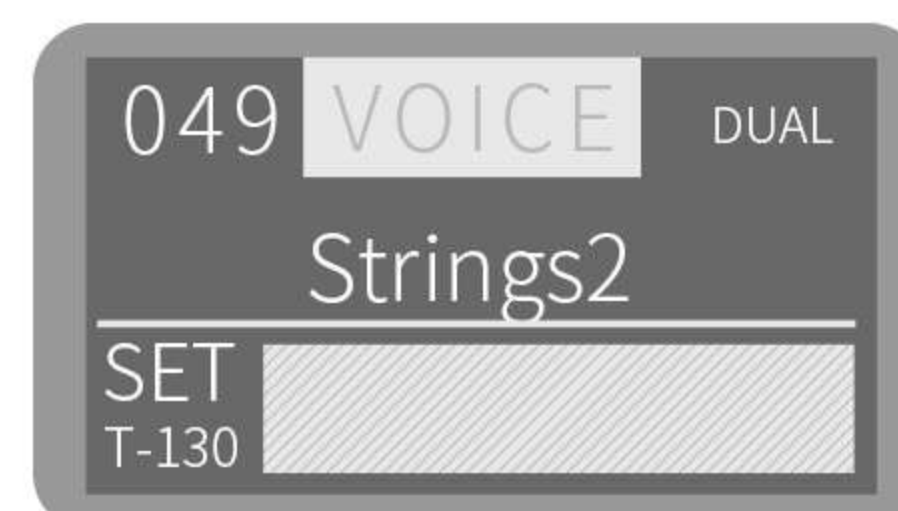

⊖ Timbre / Rhythm

- ★ **Timbre:** this digital piano has 200 timbres. See 【timbre list】 for details.
- ★ Under the default of startup, the default tone is 000 piano tone.
- ★ Long press the tone 【tone / rhythm】 key, press the 【+】 key or 【-】 key to select the desired tone.
- ★ **Rhythm:** this digital piano has 200 rhythms, which are carefully arranged by percussion rhythm and instrumental accompaniment, representing many different styles, and these styles are basically determined by rhythm type. See 【rhythm list】 in the attached table for details.
- ★ Short press the 【tone / rhythm】 key to switch to the rhythm selection state, and press the 【+】 key or 【-】 key to adjust.

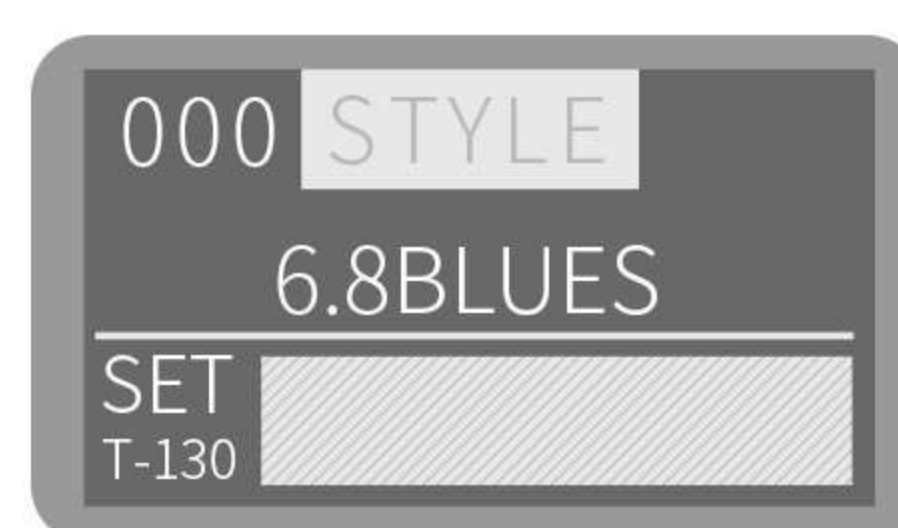

简体中文

 
ENGLISH



Instructions for using function panel keys⁵


⊖ Demo / Volume

- ★ This digital piano has built-in 100 demonstration songs to show a variety of timbres. Users can have a preliminary understanding of the digital piano through the demonstration music. See **【list of demo.songs】** for details of demo. tracks.
- ★ Short press the **【demo / volume】** key and select the desired track with the **【+】** key or **【-】** key.
Short press to start or stop the demo song.
- ★ Long press the **【demo / volume】** key and use the **【+】** key or **【-】** key to select the desired volume.
(range: 0-32, default: 32)

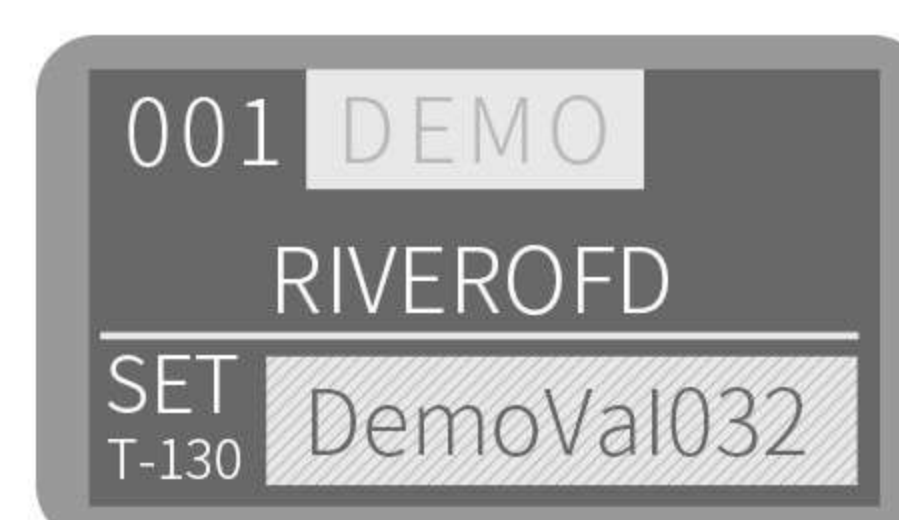

⊖ Record/ Play

- ★ Long press the **【record / play】** key to enter the recording preparation state, and the "Da, Da, Da", and then the **【record / play】** key light will flash. Press any piano key to start recording (the light is on for a long time). If the chord is turned on, the recording includes rhythm and melody, otherwise only melody is recorded.
- ★ Short press the **【record/play】** key to end the recording, and the light goes out at the same time.
- ★ Short press the **【record/play】** key to play the previously recorded music.

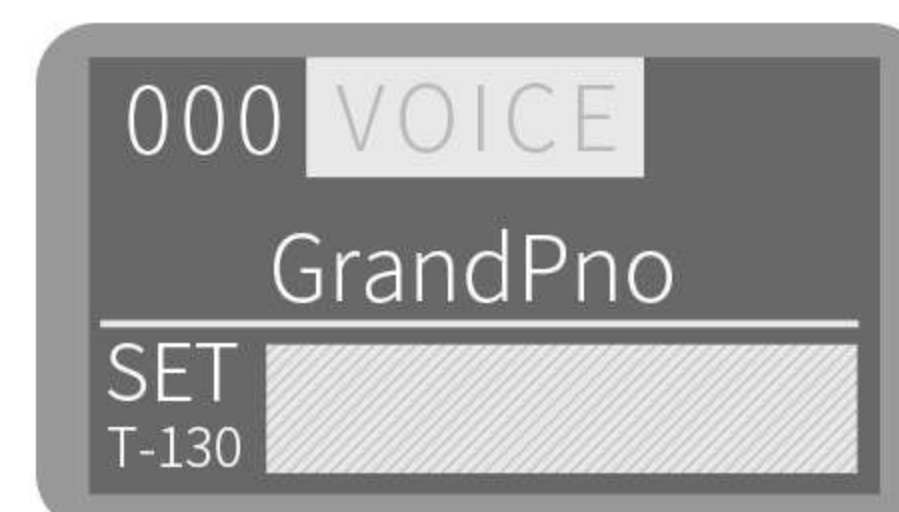

简体中文

 
ENGLISH



Instructions for using function panel keys⁶


⊖ Timbre - Grand Piano

- ★ Short press **【timbre 1】** to set the grand piano timbre,
Press **【+】** or **【-】** to switch tracks (000-199)

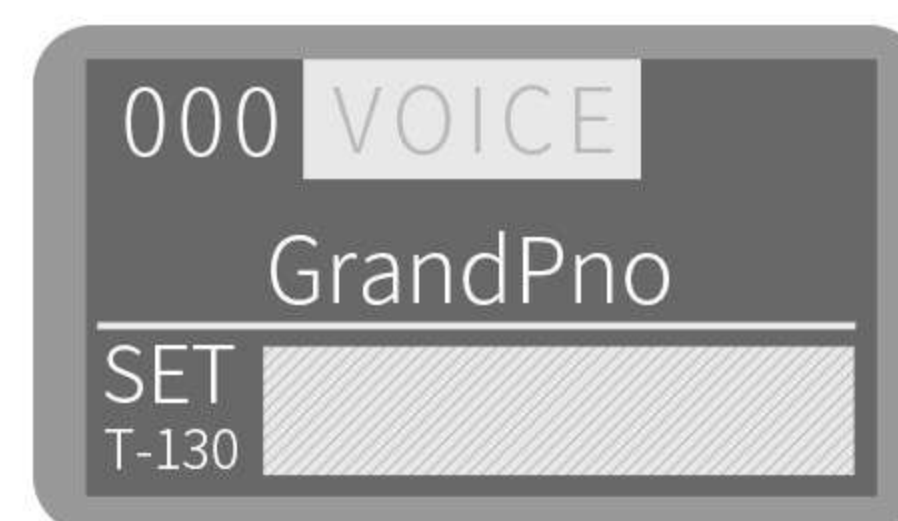


⊖ Timbre - Electric Piano 1

 - ★ Short press **【timbre 2】** to set the timbre of electric piano 1,
Press **【+】** or **【-】** to switch tracks (000-199)

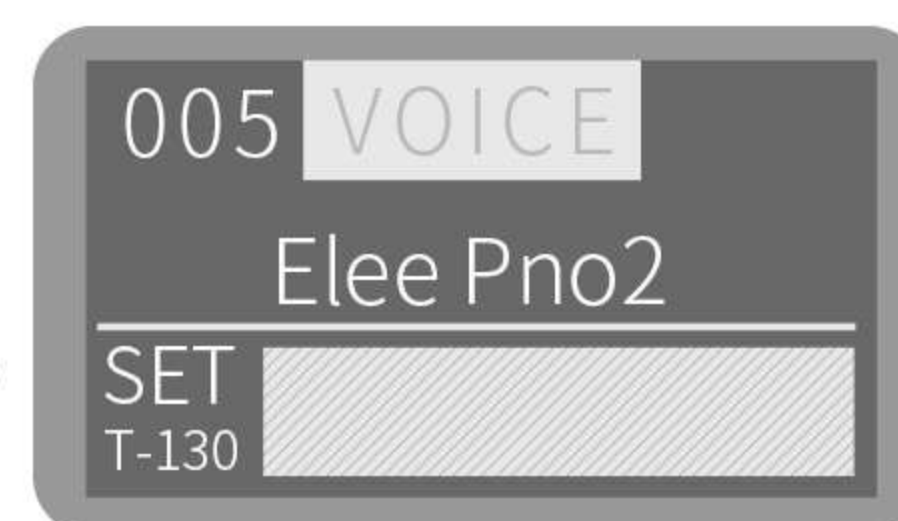

⊖ Timbre - Rock organ

 
- ★ Short press **【timbre 3】** to change the timbre of the rolling organ, Press **【+】** or **【-】** to switch tracks (000-199)

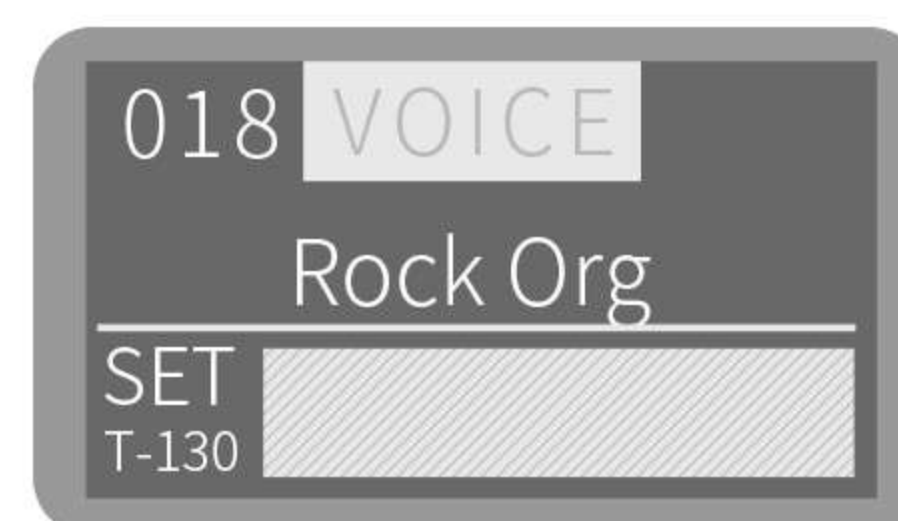

简体中文

⊖ Timbre - Synthetic string 2

 
- ★ Short press **【timbre 4】** to synthesize string 2 timbre,
Press **【+】** or **【-】** to switch tracks (000-199)

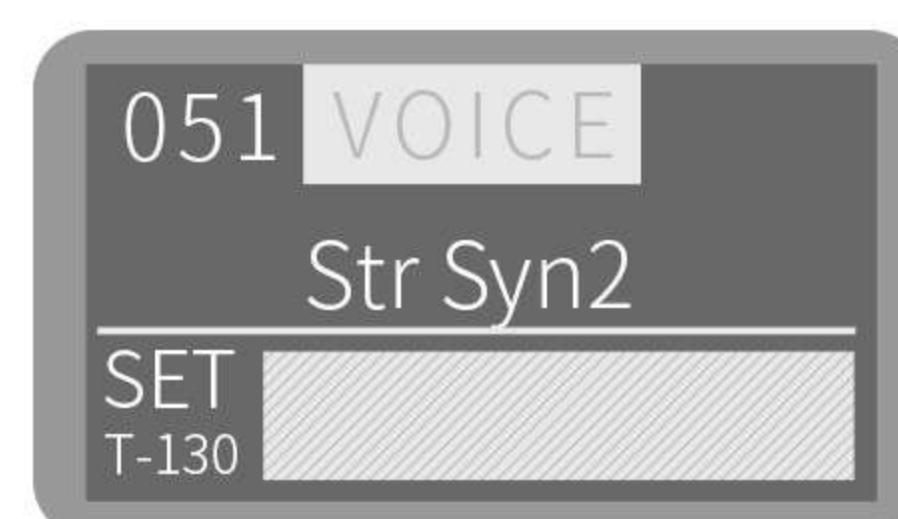

ENGLISH


⊖ Timbre - Brass Ensemble

 - ★ Short press **【timbre 5】** to set the timbre of brass ensemble,
Press **【+】** or **【-】** to switch tracks (000-199)

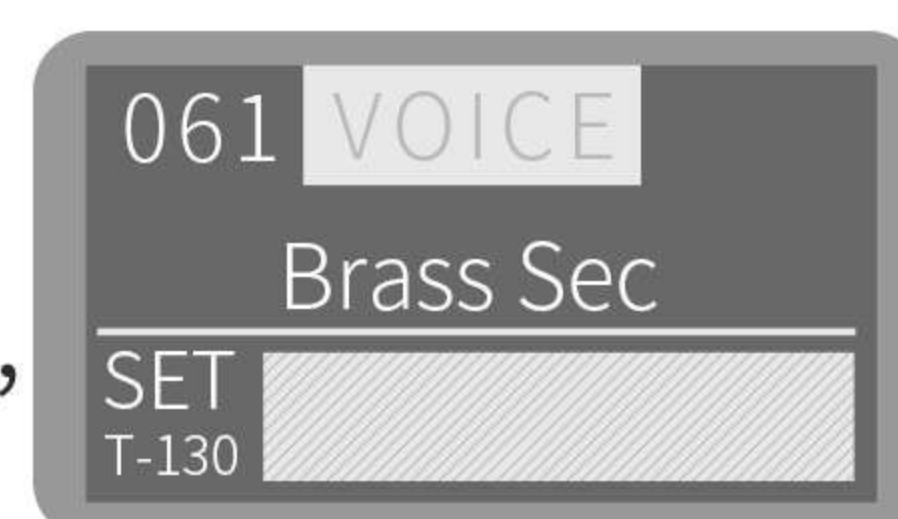

⊖ Timbre - Alto Saxophone

 - ★ Briefly press **【timbre 6】** to set the Alto Saxophone timbre,
Press **【+】** or **【-】** to switch tracks (000-199)

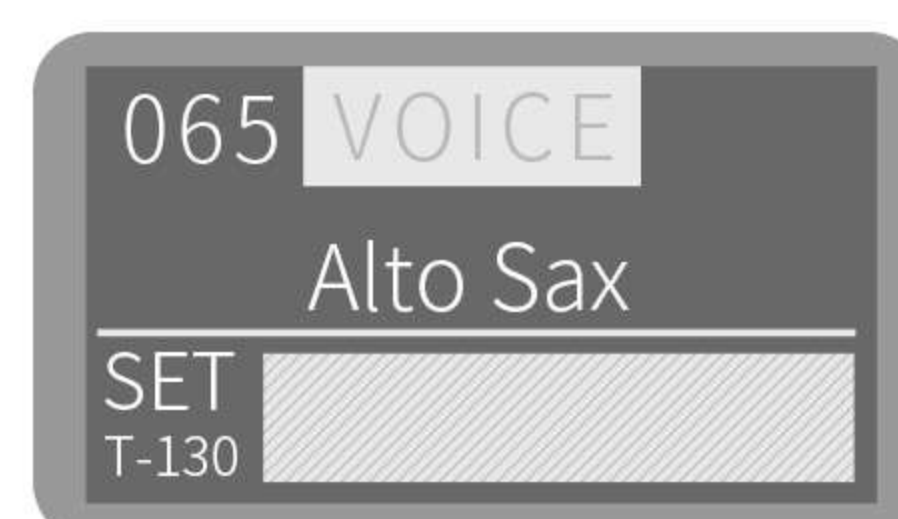



Demo song list 1

Serial number	Name	Serial number	Name
①	WILD ROSE	②6	GRAND MARCH
②	RIVER OF DREAM	②7	PARAPHRASE
③	TWINKLE TWINKLE VARIATION	②8	DANGEROUS AREA
④	DESAFINADO	②9	FUTURE
⑤	FORGET	③0	SUNSHINE BEACH
⑥	CHOPIN:GRANDE VALSE BRILLANTE	③1	JUNE SAMBA
⑦	ACROSS THE SEA	③2	KENNYG:SONGBIRD
⑧	XAVER SCHARWENKA: POLISH DANCE OP.3 NO.1	③3	L'INVERNO IN F MINOR
⑨	RED CHERRY AND WHITE APPLE BLOSSOM	③4	WINE
⑩	WHEELS ON THE BUS	③5	BLUES
⑪	LONDON DERRY AIR	③6	FEELING
⑫	FARAWAY	③7	RED RIVER VALLEY
⑬	CARRY ME BACK TO OLD VIGINNY	③8	FANTASY_IN_SUMMER
⑭	JASMINE FLOWER	③9	LEMON TREE
⑮	TWIST VARIATION	④0	I DO IT FOR YOU
⑯	DANSE NEGRE OP.58	④1	BEETHOVEN PIANO SONTA NO.30
⑰	PALM LEAF	④2	CARMEN
⑱	D MAJOR TANGO	④3	AMERICAN PATROL
⑲	SYMPHONY NO.94 SURPRISE	④4	MENDELSSOHN:RONDO IN D MAJOR
⑳	KATYUSHA	④5	AURORA OF CITY
㉑	SILENT NIGHT	④6	WISH U CHRISTMAS
㉒	BEETHOVEN_BAGATELLES	④7	NO STOPPING GALOP
㉓	IN THE HALL OF THE MOUNTAIN KING	④8	LAST SUMMER
㉔	EXPLORING	④9	JAZZ
㉕	PERELUDE III	⑤0	RHYTHM OF THE RAIN

简体中文

ENGLISH



Demo song list2

Serial number	Name	Serial number	Name
⑤1	CURIOUS STORY	⑦6	BARCAROLE
⑤2	ATLANTIS	⑦7	CHOPIN:ETUDE IN C MINOR OP.10 NO.12
⑤3	FLYING TRAPEZE	⑦8	DANCE OF YOUTH
⑤4	TROIS ECOSSAISES OP.72,NO.3-5	⑦9	GRIEG_AIR
⑤5	ALLEGRO CON BRIO	⑧0	THE HOME COMING
⑤6	IT'S A SMALL WORLD	⑧1	LAZY_BIRD
⑤7	ARABESQUE	⑧2	PURPLE LIGHT
⑤8	CHILDHOOD	⑧3	ENTERTAINMENT
⑤9	JUST THE TWO OF US	⑧4	CHOPIN:MAZURKA OP.39 NO.10
⑥0	SEE SHORE	⑧5	THE BEAR IN THE FOREST
⑥1	ALL KIND OF MY EVERYTHING	⑧6	PRIMITIVE DANCE STEPS
⑥2	NOCTURNE OP.9 NO2	⑧7	MODERN GRAY
⑥3	SOMETHING IN THE AIR	⑧8	MOONLIGHT
⑥4	COMFORT	⑧9	GRANDFATHER'S CLOCK
⑥5	LET IT SNOW	⑨0	ARIRANG
⑥6	BINGO	⑨1	CELEBRATE THE HARVEST MERRILY
⑥7	LIEBESTRAUM	⑨2	TCHAIKOVSKY:DANSE NAPOLITAINE OP.20
⑥8	PERFECT HAPPINESS	⑨3	FIVE HUNDRED MILES
⑥9	TOCCATA	⑨4	DARK EYES
⑦0	LA BAMBA	⑨5	BRAHMS_CONCERTO
⑦1	RANDO CAPRICCIO	⑨6	WALTZ IN D FLAT,OP.64 NO.1
⑦2	SCHERZO	⑨7	COBWEB
⑦3	LA CAMPANELLA	⑨8	HAPPY BOSSA
⑦4	LOCKOUT	⑨9	SUMMER PALACE
⑦5	ROMANCE DE AMOR	⑩0	PIZZICATO POLKA

简体中文

ENGLISH



Timbre list1

Serial number	Name	037	Slap Bass 2	075	Pan Flute
000	Acoustic Grand Piano	038	Synth Bass 1	076	Bottle Blow
001	Bright Acoustic Piano	039	Synth Bass 2	077	Shakuhachi
002	Electric Grand Piano	040	Violin	078	Whistle
003	Honky-tonk Piano	041	Viola	079	Ocarina
004	Electric Piano1	042	Cello	080	Lead 1 (square)
005	Electric Piano2	043	Contrabass	081	Lead 2 (sawtooth)
006	Harpsichord	044	Tremolo Strings	082	Lead 3 (calliope lead)
007	Clavichord	045	Pizzicato Strings	083	Lead 4 (chiff lead)
008	Celesta	046	Orchestral Harp	084	Lead 5 (charang)
009	Glockenspiel	047	Timpani	085	Lead 6 (voice)
010	Music box	048	String Ensemble 1	086	Lead 7 (fifths)
011	Vibraphone	049	String Ensemble 2	087	Lead 8 (bass+lead)
012	Marimba	050	Synth Strings 1	088	Pad 1 (new age)
013	Xylophone	051	Synth Strings 2	089	Pad 2 (warm)
014	Tubular Bells	052	Choir Aahs	090	Pad 3 (polysynth)
015	Dulcimer	053	Voice Oohs	091	Pad 4 (choir)
016	Hammond Organ	054	Synth Voice	092	Pad 5 (bowed)
017	Percussive Organ	055	Orchestra Hit	093	Pad 6 (metallic)
018	Rock Organ	056	Trumpet	094	Pad 7 (halo)
019	Church Organ	057	Trombone	095	Pad 8 (sweep)
020	Reed Organ	058	Tuba	096	FX 1 (rain)
021	Accordion	059	Muted Trumpet	097	FX 2 (soundtrack)
022	Harmonica	060	French Horn	098	FX 3 (crystal)
023	Tango Accordion	061	Brass Section	099	FX 4 (atmosphere)
024	Acoustic Guitar (nylon)	062	Synth Brass 1	100	FX 5 (brightness)
025	Acoustic Guitar (steel)	063	Synth Brass 2	101	FX 6 (goblins)
026	Electric Guitar (jazz)	064	Soprano Sax	102	FX 7 (echoes)
027	Electric Guitar (clean)	065	Alto Sax	103	FX 8 (sci-fi)
028	Electric Guitar (muted)	066	Tenor Sax	104	Sitar
029	Overdriven Guitar	067	Baritone Sax	105	Banjo
030	Distortion Guitar	068	Oboe	106	Shamisen
031	Guitar Harmonics	069	English Horn	107	Koto
032	Acoustic Bas	070	Bassoon	108	Kalimba
033	Electric Bass (finger)	071	Clarinet	109	Bagpipe
034	Electric Bass (pick)	072	Piccolo	110	Fiddle
035	Fretless Bass	073	Flute	111	Shanai
036	Slap Bass 1	074	Recorder	112	Tinkle Bell

简体中文

ENGLISH



Timbre list2

113	Agogo	151	Feedback Gt	189	Electric Percussion
114	Steel Drums	152	Synth 1	190	Gt.CutNoise
115	Woodblock	153	Synth 2	191	String Slap
116	Taiko Drum	154	Synth 3	192	Fl.KeyClick
117	Melodic Tom	155	Synth 4	193	Thunder
118	Synth Drum	156	Synth 5	194	Wind
119	Reverse Cymbal	157	Synth 6	195	Stream
120	Guitar Fret Noise	158	Synth 7	196	Bubble
121	Breath Noise	159	Violin 2	197	Dog
122	Seashore	160	Cello 2	198	Creaking
123	Bird Tweet	161	Harp 2	199	Door
124	Telephone Ring	162	Strings		
125	Helicopter	163	Choir Aahs 2		
126	Applause	164	Voice doo 2		
127	Gunshot	165	Trumpet 2		
128	Piano w	166	Trombone 2		
129	Piano d	167	MuteTrumpet 2		
130	HonkyTonkw	168	French Horn 2		
131	Detuned EP	169	Brass 2		
132	60s E.Piano	170	Soprano Sax 2		
133	Harpsichord 2	170	Oboe 2		
134	Clavichord 2	172	EnglishHorn 2		
135	Celesta 2	173	Clarinet 2		
136	Glockenspiel 2	174	Piccolo 2		
137	Music Box 2	175	Flute 2		
138	Vibraphone 2	176	Pan Flute 2		
139	Marimba 2	177	Shakuhachi 2		
140	Marimba 2	178	Square 2		
141	Xylophone 2	179	Sine Wave		
142	Tubular-bell 2	180	Vox Lead		
143	Detuned Or	181	Space Voice		
144	60's Organ	182	Syn Mallet		
145	Bandoneon	183	Echo Bell		
146	Ukulele	184	Echo Pan		
147	Mandolin	185	Sitar 2		
148	Hawaiian Gt	186	Castanets		
149	Chorus Gt	187	Concert BD		
150	Funk Gt	188	808 Tom		

简体中文

ENGLISH



Rhythm list1

Serial number	Name	037	SWINGJAZZ	075	LATIN1
000	6.8BLUES	038	COOLJAZZ	076	LATIN2
001	4.4BLUES	039	DIXIELAND1	077	LATIN3
002	5.4BEAT1	040	DIXIELAND2	078	LATIN4
003	5.4BEAT2	041	FUSION	079	LATIN5
004	BOOGIEWOOGIE	042	LANGE	080	LATIN6
005	SOULSHUFFLE	043	SOUL1	081	TANGO1
006	RAGTIME1	044	SOUL2	082	TANGO2
007	RAGTIME2	045	SOUL3	083	RUMBA1
008	SHUFFLE1	046	FOXTROT1	084	RUMBA2
009	SHUFFLE2	047	FOXTROT2	085	RUMBA3
010	SHUFFLE3	048	FOXTROT3	086	CHACHA1
011	SHUFFLE4	049	FOXTROT4	087	CHACHA2
012	BLUES1	050	FOXTROT5	088	CHACHA3
013	BLUES2	051	FOXTROT6	089	CHACHA4
014	BLUES3	052	FOXTROT7	090	CHACHA5
015	BLUES4	053	FOXTROT8	091	CHACHA6
016	TWIST1	054	FOXTROT9	092	BOSSANOVA1
017	TWIST2	055	COUNTRY1	093	BOSSANOVA2
018	TWIST3	056	COUNTRY2	094	BOSSANOVA3
019	TWIST4	057	COUNTRY3	095	SAMBA1
020	GOSPEL1	058	COUNTRY4	096	SAMBA2
021	GOSPEL2	059	COUNTRY5	097	SAMBA3
022	GOSPEL3	060	COUNTRY6	098	MAMBO1
023	R&B	061	COUNTRY7	099	MAMBO2
024	SWING1	062	COUNTRY8	100	MAMBO3
025	SWING2	063	COUNTRY9	101	REGGAE1
026	BLUEBOOGIE	064	COUNTRY10	102	REGGAE2
027	JAZZ1	065	COUNTRY11	103	SALSA1
028	JAZZ2	066	COUNTRY12	104	SALSA2
029	JAZZ3	067	COUNTRY13	105	MODERN1
030	JAZZ4	068	COUNTRY14	106	MODERN2
031	JAZZ5	069	COUNTRY15	107	DANCE1
032	JAZZBALLAD	070	COUNTRY16	108	DANCE2
033	JAZZWALTZ	071	COUNTRYPOP	109	DANCE3
034	JAZZBAND1	072	COUNTRYSHUFFLE1	110	DANCE4
035	JAZZBAND2	073	COUNTRYSHUFFLE2	111	DANCE5
036	JAZZBAND3	074	COUNTRYSWING	112	DANCE6

简体中文

ENGLISH



Rhythm list2

113	DANCE7	151	FOLKPOP	189	BEGUINE2
114	70DISCO1	152	NEWAGE	190	CARIBBEAN
115	70DISCO2	153	POPBOSSA1	191	BOLERO
116	DISCO1	154	POPBOSSA2	192	DANGDUT
117	DISCO2	155	POPRAP	193	CHINA
118	DISCO3	156	POPSAMBA	194	JIANGNAN
119	VAPERWAVE	157	8BEAT1	195	XIZANG
120	FUNK1	158	8BEAT2	196	YUNNAN
121	FUNK2	159	8BEAT3	197	HAWAII
122	FUNK3	160	8BEAT4	198	GUARACHA
123	FUNK4	161	8BEAT5	199	CHARLESTON
124	FUNK5	162	8BEAT6		
125	FUNK6	163	8BEAT7		
126	FUNK7	164	8BEAT8		
127	R&B1	165	8BEAT9		
128	R&B2	166	8BEATROCK1		
129	R&B3	167	8BEATROCK2		
130	R&B4	168	Rock1		
131	R&B5	169	Rock2		
132	R&B6	170	Rock3		
133	16BEAT1	170	Rock4		
134	16BEAT2	172	Rock5		
135	16BEAT3	173	INDIEROCK1		
136	16BEAT4	174	INDIEROCK2		
137	16BEAT5	175	60thRock		
138	16BEAT6	176	GlamMetal1		
139	16BEAT7	177	GlamMetal2		
140	16BEAT8	178	GlamMetal3		
141	POP1	179	PunkRock1		
142	POP2	180	PunkRock2		
143	POP3	181	PunkRock3		
144	POP4	182	PunkRock4		
145	POP5	183	PunkRock5		
146	POP6	184	JIVEROCK		
147	POP7	185	ROCKSHUFFLE		
148	POP8	186	ROCK'N'ROLL1		
149	VINTAGE1	187	ROCK'N'ROLL2		
150	VINTAGE2	188	BEGUINE1		

简体中文

ENGLISH



Fingered Chord List

C	Cm	C7	Cm7	Cdim7	CM7	Cm7-5	Cdim
C#/(D ^b)	C#/(D ^b)m	C#/(D ^b)7	C#/(D ^b)m7	C#/(D ^b)dim7	C#/(D ^b)M7	C#/(D ^b)m7-5	C#/(D ^b)dim
D	Dm	D7	Dm7	Ddim7	DM7	Dm7-5	Ddim
(D [#])/E ^b	(D [#])/E ^b m	(D [#])/E ^b 7	(D [#])/E ^b m7		(D [#])/E ^b M7	(D [#])/E ^b m7-5	(D [#])/E ^b dim
E	Em	E7	Em7		EM7	Em7-5	Edim
F	Fm	F7	Fm7		FM7	Fm7-5	Fdim
F [#] /(G ^b)	F [#] /(G ^b)m	F [#] /(G ^b)7	F [#] /(G ^b)m7		F [#] /(G ^b)M7	F [#] /(G ^b)m7-5	F [#] /(G ^b)dim
G	Gm	G7	Gm7		GM7	Gm7-5	Gdim
(G [#])/A ^b	(G [#])/A ^b m	(G [#])/A ^b 7	(G [#])/A ^b m7		(G [#])/A ^b M7	(G [#])/A ^b m7-5	(G [#])/A ^b dim
A	Am	A7	Am7		AM7	Am7-5	Adim
(A [#])/B ^b	(A [#])/B ^b m	(A [#])/B ^b 7	(A [#])/B ^b m7		(A [#])/B ^b M7	(A [#])/B ^b m7-5	(A [#])/B ^b dim
B	Bm	B7	Bm7		BM7	Bm7-5	Bdim

简体中文

ENGLISH



Single Finger Chord List

C	Cm	C7	Cm7
C#	C#m	C#7	C#m7
D	Dm	D7	Dm7
D#	D#m	D#7	D#m7
E	Em	E7	Em7
F	Fm	F7	Fm7
F#	F#m	F#7	F#m7
G	Gm	G7	Gm7
G#	G#m	G#7	G#m7
A	Am	A7	Am7
A#	A#m	A#7	A#m7
B	Bm	B7	Bm7

简体中文

ENGLISH



Product Maintenance

Careful maintenance and protection of this product plays a very important role in prolonging the service life of the product and reducing faults.

1 Avoid heat, moisture or direct sunlight

Do not over expose the product to direct sunlight, or place it near the air conditioner or extremely hot place.

2 Do not use it near TV or radio

This product may cause video or audio interference to the reception of TV and radio. If this happens, move the product away from the TV or radio.

3 Do not use paint, thinner or similar chemicals for cleaning

Clean the product with a soft cloth wet with weak aqueous solution and neutral detergent. Soak the cloth in the solution and screw it dry until it is nearly dry.

4 Do not shake to avoid collision


The product should be handled with care when moving. Violent vibration and collision are strictly prohibited to avoid damage to the shell or internal electronic components.



Description before use



 Illustration of the back socket of the piano head

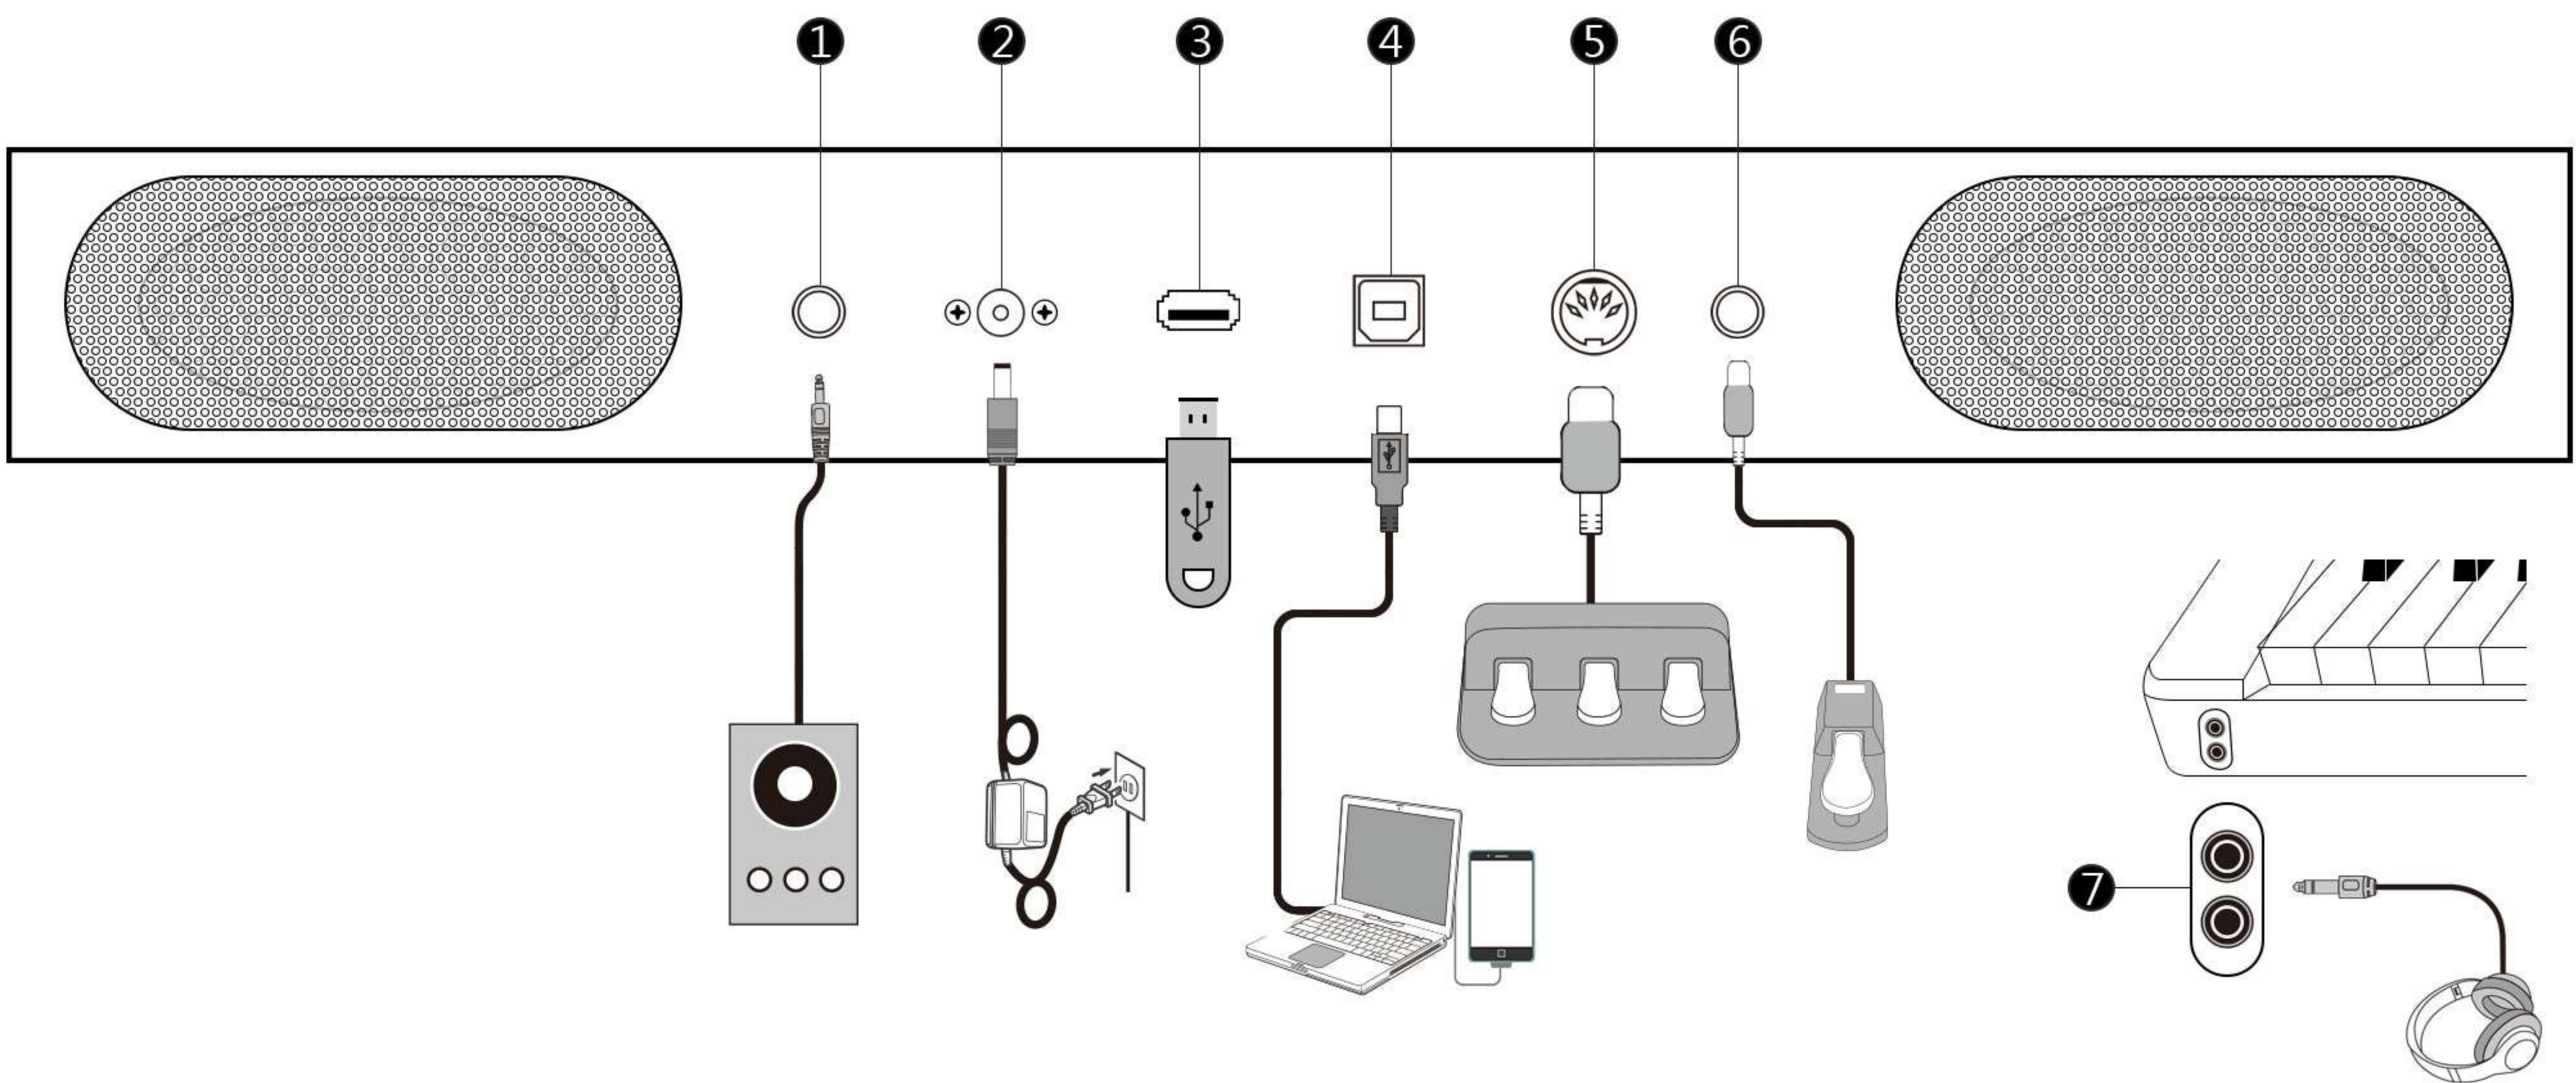

1 Audio input connector

2 Power cord connection

3 MP3 Connection

4 USB socket

5 Illustration of the three pedals

6 Single pedal socket


7 Dual Headphone Jacks

简体中文

ENGLISH



 Illustration of the front key function of the piano head

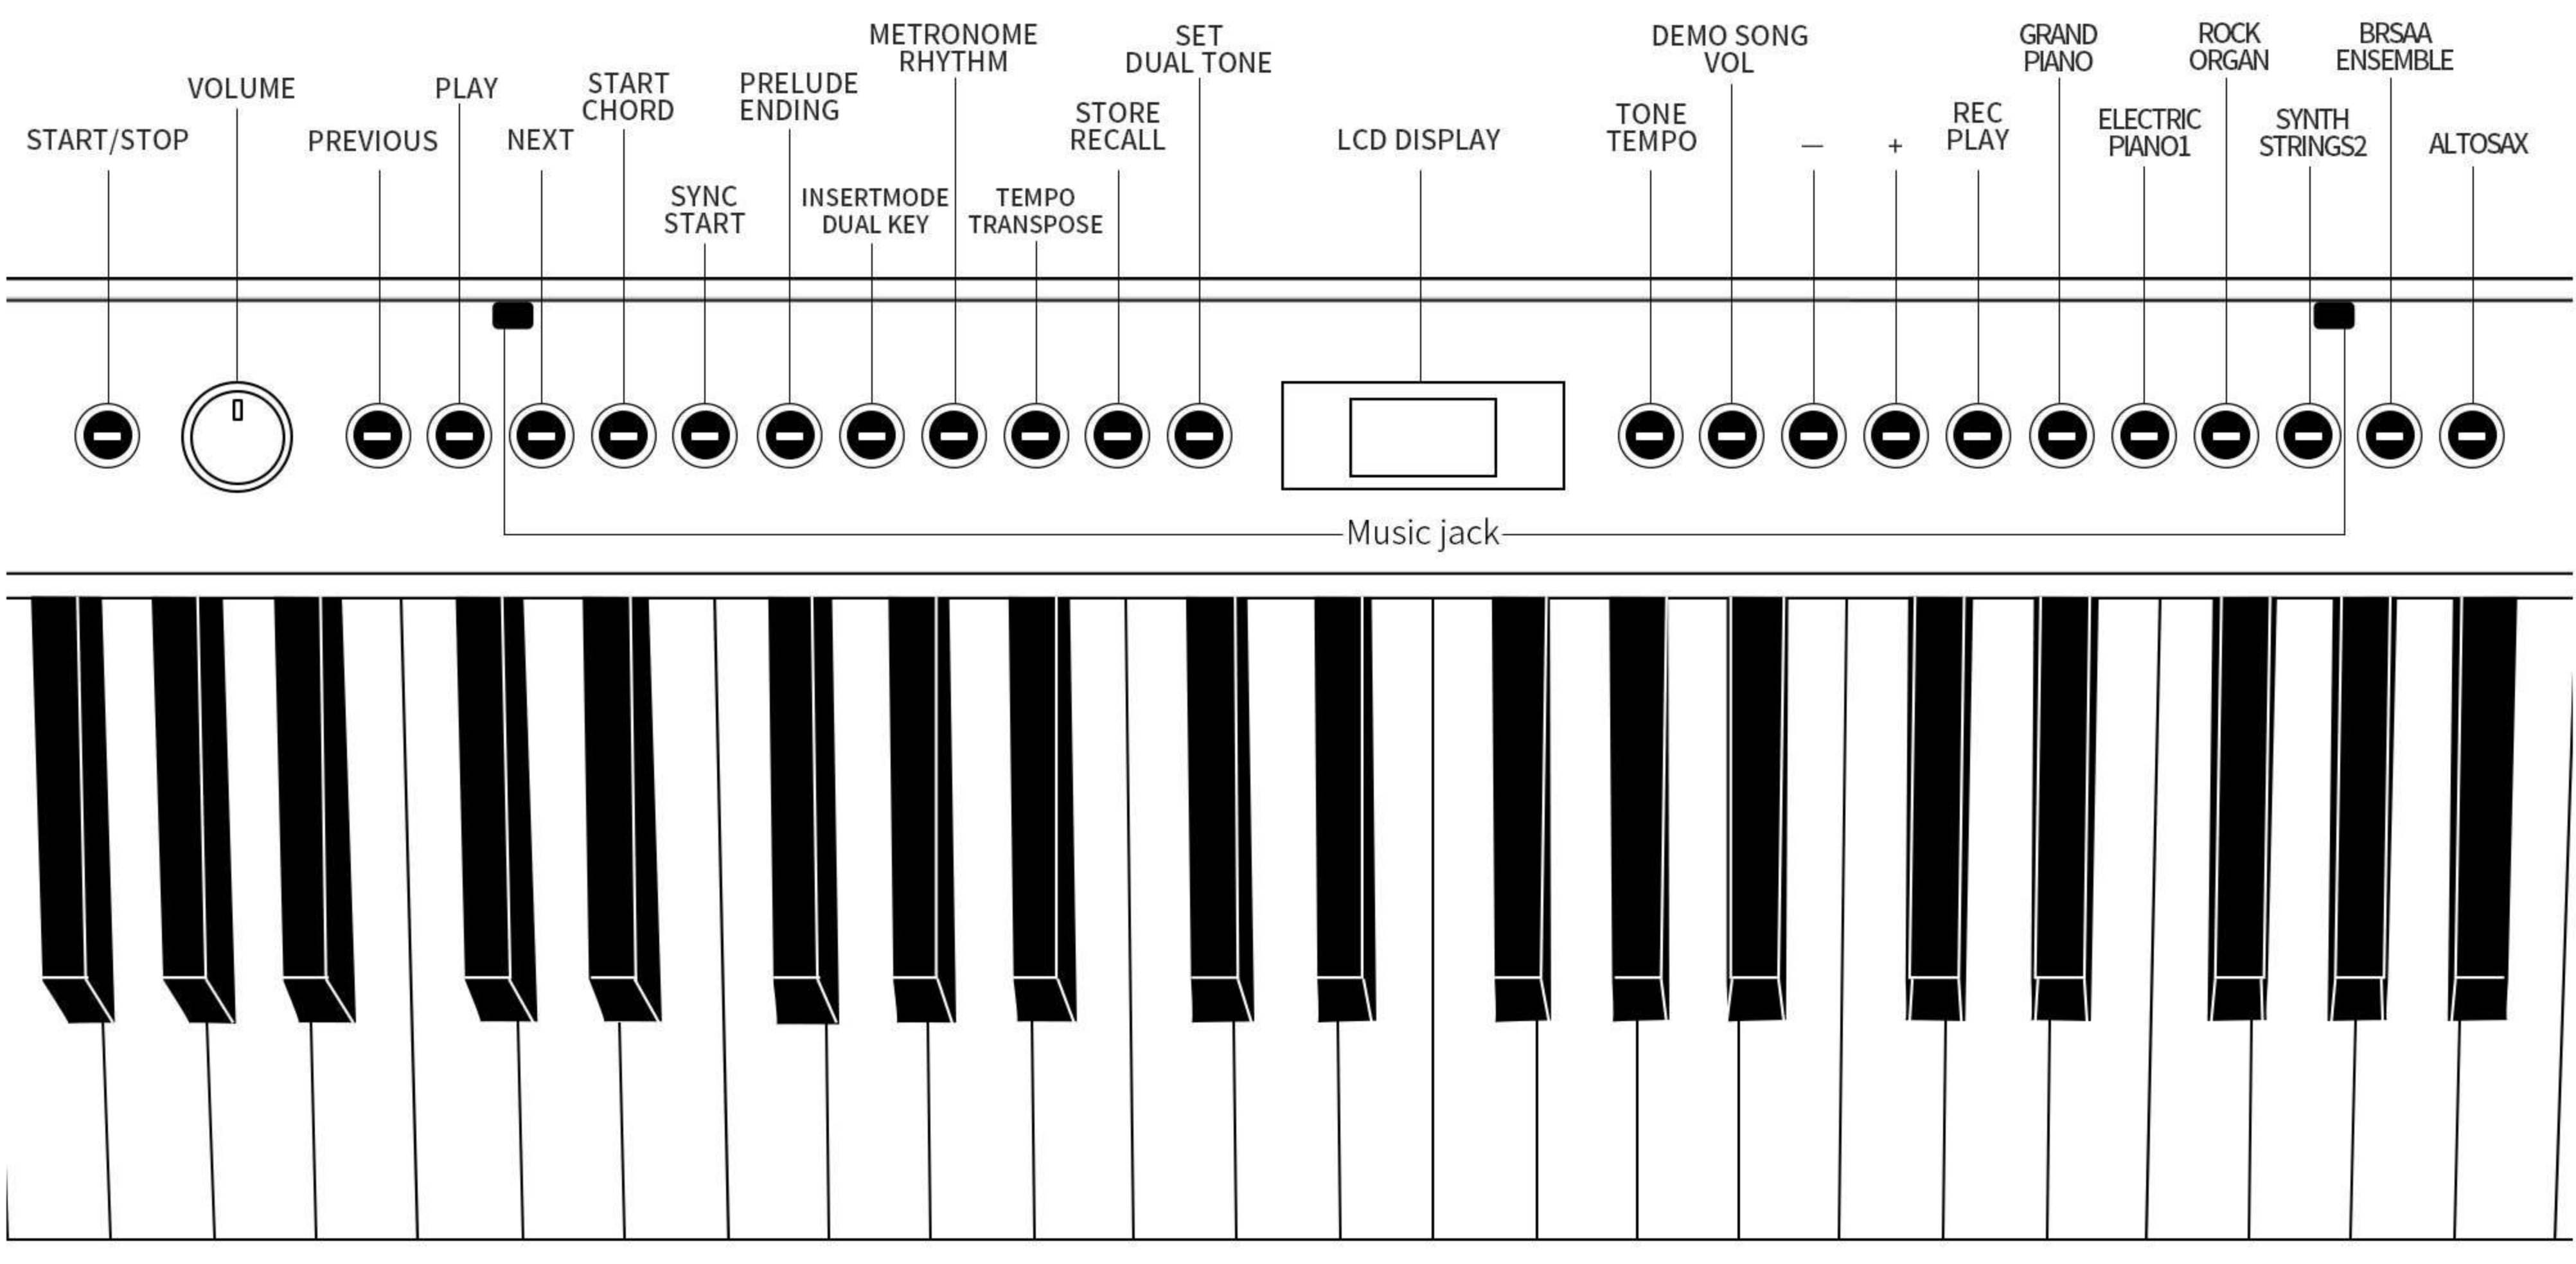



Safety precautions

Power Supply

This product can be powered by standard indoor wall socket. Please only use the power cord equipped with this product. Be sure to turn off the power when not in use for a long time. When not in use for a long time, please unplug the power cord and keep it properly.

Sign

In order to ensure your safe and correct use of this product and prevent injury to users and others and financial damage, this manual and the product are marked with a series of safety signs. Various signs and their meanings are as follows:


Warning


This sign indicates that if this sign is ignored and the product is misoperated, there is a potential risk of death or serious injury.


Attention

It indicates that if you ignore this logo and misoperate this product, there is a potential risk of causing injury to people or other financial damage.

Logo example

 A this triangular sign (\triangle) indicates the matters that users should pay attention to. (in the left case, be careful of electric shock)

 A circular sign (\odot) with a slash indicates a prohibition. The icon in or next to the sign indicates the specific prohibited content. (the left example is forbidden to disassemble)

 Circular black background sign (\bullet) indicates matters that must be observed. The diagram in this sign indicates the specific things that must be observed Contents of paragraph. (the left example shows that the power plug must be pulled out of the socket)



Safety precautions



Warning

Smoke, odor and overheating

When this product smokes, emits peculiar smell or overheats, it may cause fire and electric shock if it is used continuously. In case of the above situation, the following operations shall be carried out immediately.

1. Turn off the power.
2. Unplug the plug from the power socket.
3. Contact your dealer.

Power cord

1. Improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- The special power cord provided for this product must be used.
- AC power supply with output voltage within the rated voltage range of household must be used.
- Do not overload the power socket and power extension cord.



2. Improper handling of the power cord may lead to damage or fracture, which may cause fire and electric shock. The following precautions must be observed:

- Do not place heavy objects on the power line or heat it.
- Do not attempt to modify the power cord or bend it excessively.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, please replace the power cord of the same specification and type.



3. Do not touch the power cord and plug with wet hands, otherwise there is a risk of electric shock.



4. Please use the power cord where water will not splash. Water may cause fire and electric shock.



5. Do not put the vase or any other container containing water on this product. Water may cause fire and electric shock.



6. Do not let minors unplug and touch the power cord or connecting board. Minors do not use the common sense of electrical safety, which may cause the risk of electric shock.



Be careful

Improper use of power cord may cause fire and electric shock. The following precautions must be observed.

- Do not put the power cord near the stove or other heat sources nearby.
- Do not pull the power cord when unplugging from the power socket. The plug body must be grasped.
- The power cord plug must be fully plugged into the socket.
- Before connecting or disconnecting the power cord, make sure Confirm that the power supply is off.
- Thunderstorms occur or when traveling or other before leaving for a long time, plug it in from the power supply on the wall unplug the power cord from the base.
- The power cord should be removed from the wall at least once a year, unplug the power socket of the plug and store it clean place.



Do not burn this product

Do not put this product on fire. Otherwise, the product will burn and its internal electronic components will explode, which may cause fire and personal injury.



Water and unusual object

Water, other liquids and (metal sheet, etc.) enter on this product may cause fire and electric shock. In case of the above situation, the following operations shall be carried out immediately.



1. Turn off the power.
2. If the power cord is being used for power supply, unplug it from the power socket on the wall.
3. Contact your dealer.

Disassembly and transformation

Do not disassemble this product or replace it in any way reform. Otherwise, there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance should be entrusted to your dealer.





Safety Precautions

Drop or impact

This product may cause fire and electric shock if it is dropped or damaged by a strong impact. In case of the above situation, the following operations shall be performed immediately.



1. Turn off the power.
2. If the power cord is being used for power supply, unplug it from the power socket on the wall.
3. Contact your dealer.

Plastic bag

Do not let anyone put the plastic bag used for packaging this product on his head or into his mouth, otherwise there is a risk of suffocation. Families with young children should pay special attention.



Keep a distance from the product and support

Climbing the support may cause it to overturn or damage. Families with young children should pay special attention.



Display

Avoid placing the product on an uneven surface of table 6 or any other unstable place. Otherwise, the product will fall, and there is a risk of personal injury.



Product movement

Before moving this product, you must first unplug the power cord plug from the power socket on the wall and unplug all other cables and connecting wires. Otherwise, there is a risk of wire damage, fire and electric shock.



Cleaning

Before cleaning this product, you must first unplug the power cord plug from the power socket on the wall a, otherwise there is a risk of fire and electric shock.



Interface

Only specified equipment and devices can be connected to the interface of this product. Connecting non designated equipment or devices may cause fire and electric shock.



Location selection

Avoid placing this product in the following places. Otherwise, there is a risk of fire and electric shock.



- High temperature or dusty place.
- Kitchen or other places with oil fume.
- Place exposed to direct sunlight or any other place that will cause high temperature of this product.

Volume

Do not play music at high volume for a long time. Pay special attention when using headphones. Excessive volume will damage your hearing.



Heavy object

Do not place heavy objects on this product. Otherwise, the top of the product will be too heavy, causing the product to overturn or objects on it to fall, and there is a risk of personal injury.



Correct assembly of support

Incorrect assembly of the bracket will cause it to overturn, causing the product to fall and personal injury



Therefore, the assembly must be carried out according to the instructions of the attached installation guide to ensure that the product is correctly installed on its support.

简体中文

ENGLISH



Warranty description and warranty card

Dear user:

This product is qualified through quality inspection under strict quality management.

Thank you for purchasing and using this brand of electric piano! In order to satisfy you with our service, please read carefully after purchase, fill in this three guarantee card and keep it properly.

During the warranty period, if a fault occurs under normal use, it will be guaranteed free of charge.

- ◆ Within the warranty period, the state stipulates the three guarantee period. this card is a warranty certificate.
- ◆ The warranty work shall be arranged by the sales unit. Please show
- ◆ This card and relevant documents when contacting.

The following cases are not included in the scope of free services:

- 1: Beyond the validity period of Three Guarantees.
- 2: Damage caused by failure to use, maintain and keep the product in accordance with the requirements of the product manual.
- 3: Damage caused by dismantling by a repairer who does not undertake the three guarantees.
- 4: Without valid Three Guarantees certificate and valid delivery certificate (except those that can prove that the commodity is within the validity period of Three Guarantees)
- 5: Alter the three Guarantees certificate without authorization.
- 6: Damage caused by force majeure.

The cost of paid service is limited to materials and labor and express delivery.

Maintenance date	Delivery date
Cause of failure	
Maintenance record	
Maintenance unit	Signature of the repair staff
Maintenance date	Delivery date
Cause of failure	
Maintenance record	
Maintenance unit	Signature of the repair staff

简体中文

ENGLISH



Product model, brand and manufacturer information

Betsy 贝琪

Name: Digital electronic piano **Model:** _____

Brand: Betsy 贝琪

Compang name: HK betsy industrial limied

Address: Unit 2508A,25F bank of america tower 12 harcourt
roda centeal hong kong

Company Office Number: 00852-39216080

Manufacturer: Quanzhou jiademai Electronic Technology
Co., Ltd

Address: No. 3, guanxia Road, Jinjiang Economic
Development Zone (wuliyuan), Quanzhou, Fujian

Manufacturer's telephone number: 400-1617-608