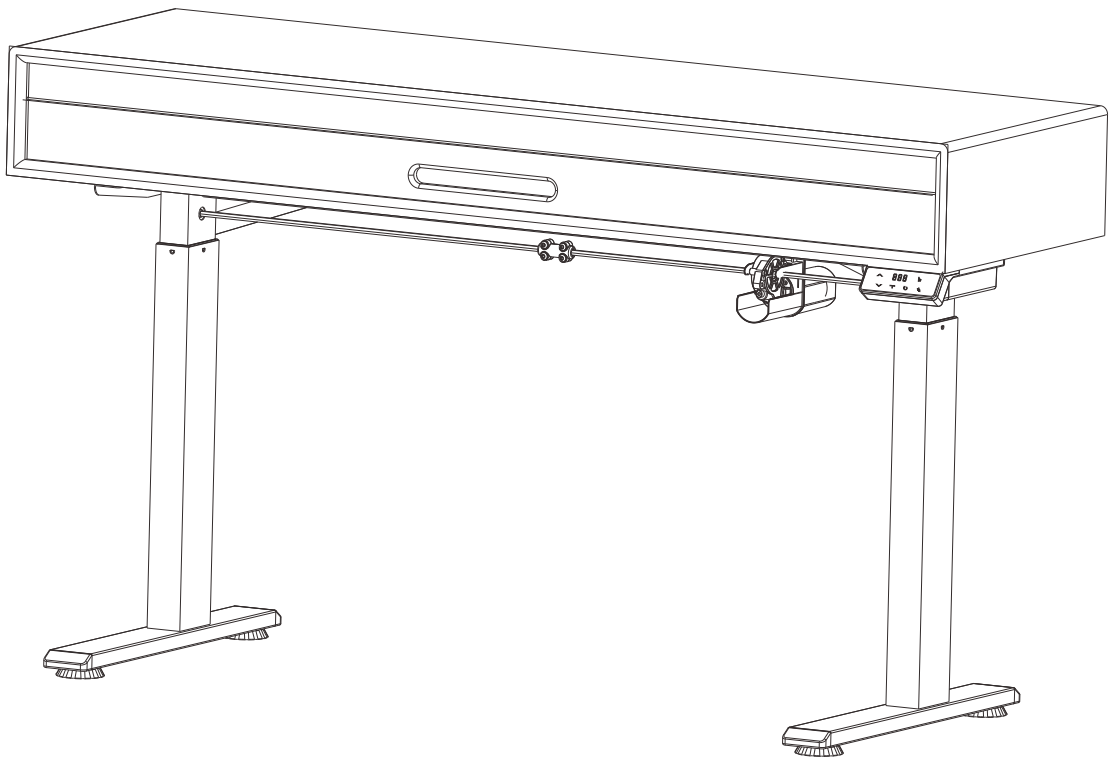# Digital piano intelligent lifting frame

品　牌：cademe

生　产　商：泉州佳德美电子科技有限公司

公司地址：福建省泉州市晋江市经济开发区（五里园）冠厦路3号

生产商电话：400- 1617- 608

Attention:

1. Working voltage: AC100~240V　　Frequency: 50/60HZ
2. Operating environment: - 10~40C
3. Before use, please check whether all power cables are firmly connected.
4. Before use, please check whether the surrounding environment is safe and ensure that there are no obstacles within the lifting range of the table.
5. Children under the age of 12 must use the product under the supervision of adults: children are not allowed to play on the product.
6. If the power cord is damaged, please find a professional to replace or repair it to avoid injury.
7. This product is not suitable for mobile use. If it is necessary to move, please careful handle to avoid damage to the product.
8. When the table starts to rise and fall, it will produce slight jitter, which is a normal phenomenon of sudden start-up of the transmission structure, and will not affect its service life.

Instructions for use of control box:

888 Monitor　　∧ Up: Up key　　⊤ T：Time setting key　　ᵇ┬ station: Save key 1
∨ Down: Down key　　↻ RST: Reset key　　ᵇ┴ sit: Save key 2

Reset operation

◆ Re plug the power cord and motor cord to ensure they are firmly inserted;

◆ Long press RST "↻"3S and wait for the controller operation indicator to flash "– – –", then release the button, and the desktop will automatically run up and down to find the highest and lowest points. After the up and down operation of the table stops, the reset process ends.

∗ **When the table is installed for the first time or scheduled to fail during use, please perform the above operations;**

Up and down key operation

◆ When the "Up" key is pressed, the desktop will run upward until it reaches the highest point of the desktop.

◆ When the "Down" button is pressed, the desktop will run downward until it reaches the lowest point of the desktop.

◆ When the "Up" key is pressed for 3s, the display screen flashes. Release the key to reach the highest point of the desktop automatically. Any key can stop halfway.

◆ When the "down" key is pressed for 3s, the display will flash. Release the key to automatically reach the lowest point of the desktop. Any key can stop halfway.
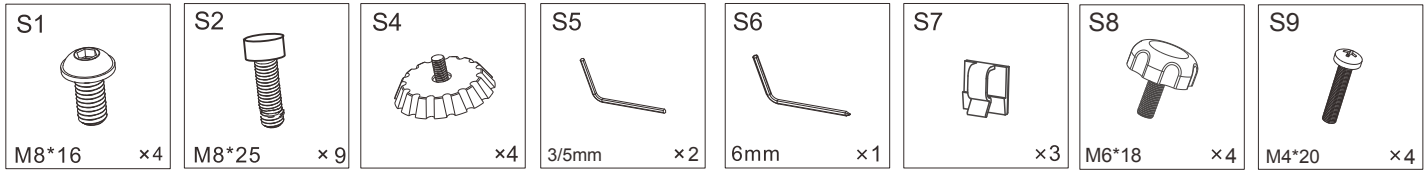
Position storage/memory position operation

◆ Storage of standing position: long press "stand" for 3 seconds, the display will flash, and the standing position will be saved

◆ Sitting position storage: long press "Sitting" for 3 seconds, the display flashes, and the sitting position is saved

◆ Stand memory position operation: short press the "Stand" key briefly to lift up, and the desktop will automatically run to the height of the memory position. During operation, any key can stop the operation.

◆ Sitting at the memory position: Short press the "Sitting" key for a short time to lift up, and the desktop will automatically run to the height of the memory position. During operation, any key can stop the operation.
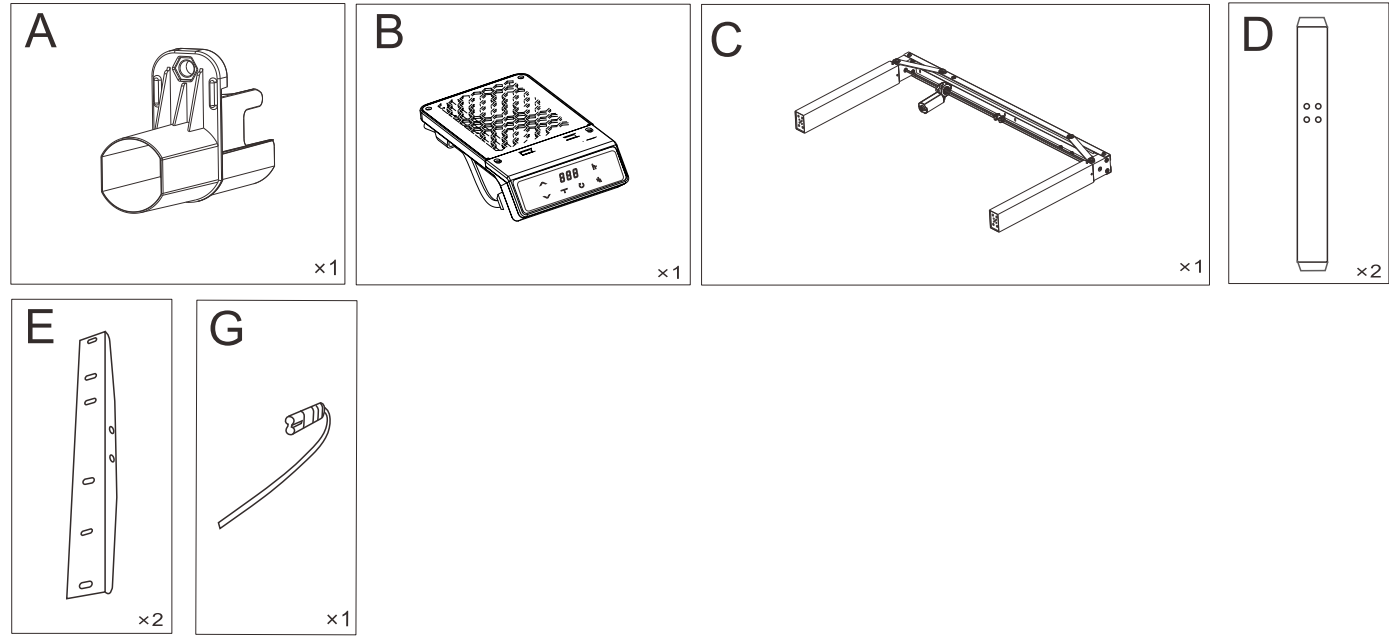
Standing and sitting reminder (countdown mode)

◆ Countdown time: provide 3 times, T30=30 minutes, T45=45 minutes, T60=60 minutes,

◆ Start- up countdown: Short press the "⊤" display screen to display "「30/「45/「60/" successively, and the countdown time start-up.

◆ Exit countdown: 1. Short press "⊤", and the display screen will display numbers:

1. When the countdown time is up, the display will flash Chr for 1 minute. Press any key to stop timing and exit.

2. Without any operation, the timer will automatically exit after 3 consecutive reminders every 5 minutes.
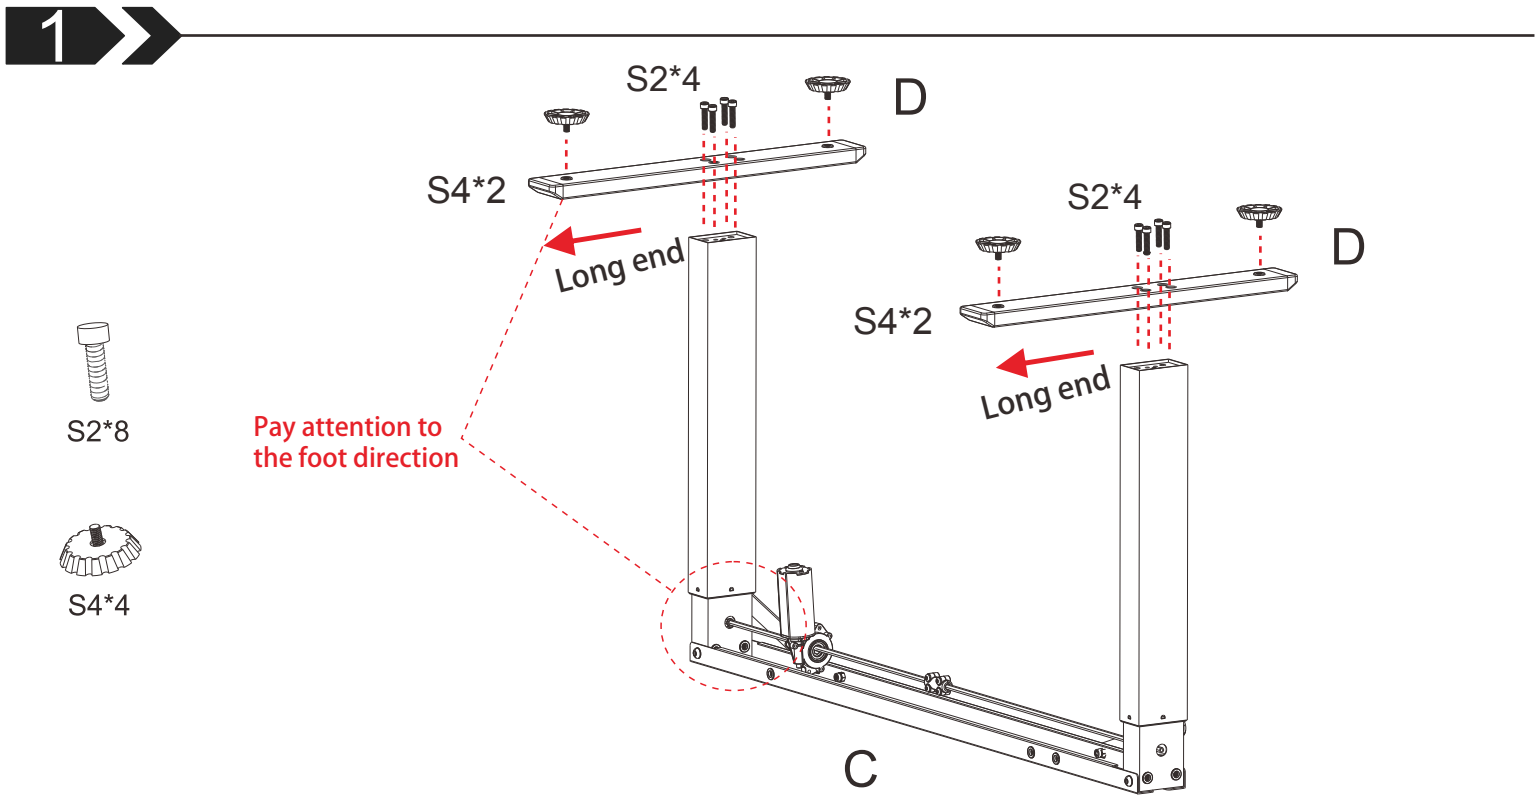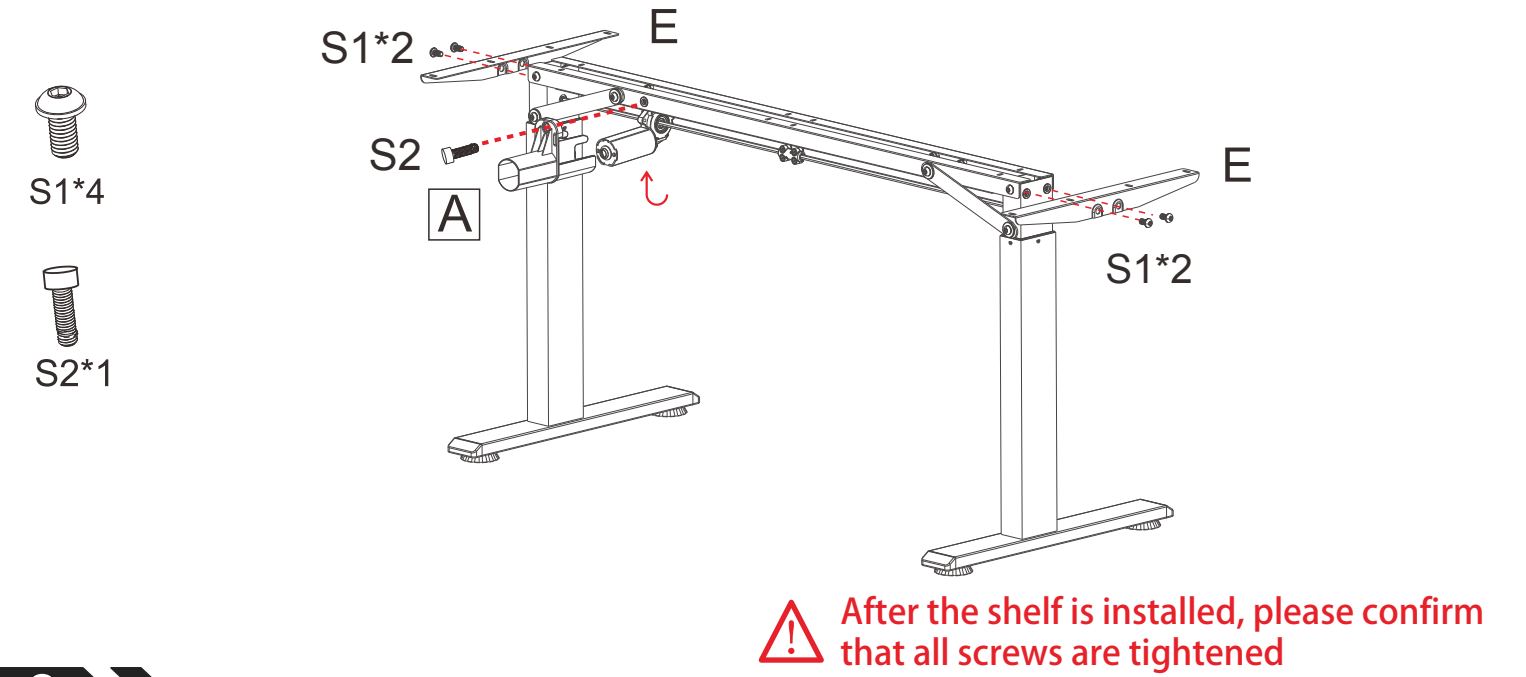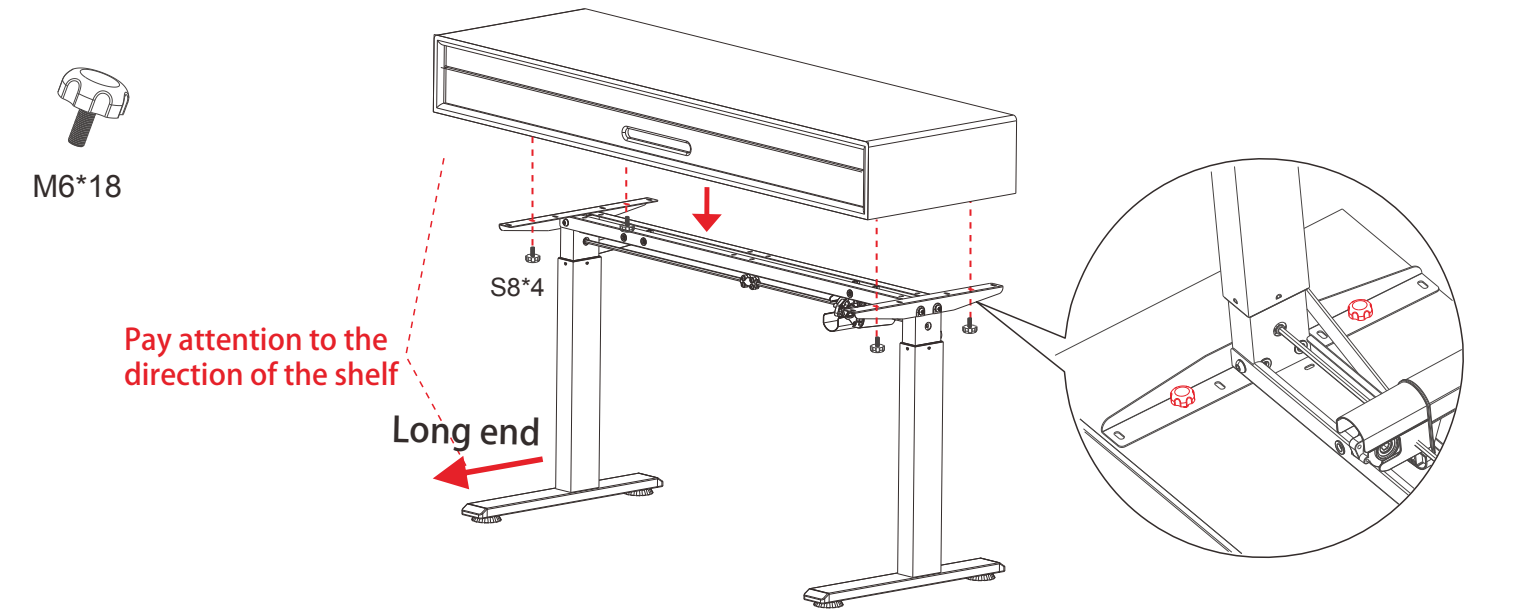
· Screw accessories

S1	S2	S4	S5	S6	S7	S8	S9
M8*16 ×4	M8*25 ×9	×4	3/5mm ×2	6mm ×1	×3	M6*18 ×4	M4*20 ×4

· Spare parts

A	B	C	D
×1	×1	×1	×2

E	G
×2	×1

· Product installation steps

1

S2*8

S4*4

S2*4

S4*2

D

Long end

S2*4

S4*2

D

Long end

Pay attention to the foot direction

C

2

S1*4

S2*1

S1*2

E

S2

A

E

S1*2

⚠️ **After the shelf is installed, please confirm that all screws are tightened**

3

M6*18

S8*4

Pay attention to the direction of the shelf

Long end

4

M4*20

B

S9*4

S7 G

After installation, press and hold the reset key for the first time to start